

DIJELOVI ZATEZNIKA KONCA - PIECES POUR TENSIONS - TENSION PARTS - FADENSPANNUNGSTEILE

	<p>Ref : 153277-453 Tension indicator flange for 422403-455</p> <p>077.153.277</p>		<p>Ref : 155727 Thread guide tension Singer 237-239-600-603- 604-620-620E-625-626-628 -629-630-630E-635-636- 638-639-640E-645-646-649</p> <p>077.155.727</p>		<p>Ref : 172217 Tension adaptor For 422403-455</p> <p>077.172.217</p>
	<p>Ref : 2102 Tension disc Singer 27, 31-15, 66, 127, 201-2, 457, 600, 1200-1</p> <p>085.002.102</p>		<p>Ref : 32572 Disc release Singer 27, 127, 66</p> <p>077.132.572</p>		<p>Ref : 32574 Release pin Singer 127, 27, 66, 31- 15</p> <p>077.132.574</p>
	<p>Ref : 37984 Tension indicator stop washer Singer For 422403-455</p> <p>077.037.984</p>		<p>Ref : 422403-500 = 44879-475 Indicator tension yellow Singer 600-604-620- 620E31-630-635-640E-645</p> <p>077.044.879</p>		<p>Ref : 422403-502 = 44879-472 Indicator tension white Singer 247, 252</p> <p>077.044.880</p>
	<p>Ref : 422403-600 Tension stud gear Singer 600-604-620- 620E31-630-635-640E-645</p> <p>078.422.404</p>		<p>Ref : 44454 Tension stud With gear For 422403-455</p> <p>077.044.454</p>		<p>Ref : 81572 Pin tension release For 422403-455</p> <p>077.081.572</p>
	<p>Ref : 68A Stop washer</p> <p>077.000.068</p>		<p>Ref : 68B Lock washer</p> <p>077.000.069</p>		<p>Ref : 68C Stop washer</p> <p>077.000.070</p>
	<p>Ref : 68D Release washer</p> <p>077.000.071</p>		<p>Ref : 1274 (50327) Tension stud Singer 31-15, 27, 66, 99</p> <p>077.150.327</p>		<p>Ref : 1560 Tension thumb nut Singer 127, 27, 66, 31-15, 66-6, 29-4</p> <p>077.001.560</p>
	<p>Ref : 50291 Tension stud Singer 15-30 (HA-17 tension)</p> <p>077.150.291</p>		<p>Ref : 8238 Tension beehive spring Singer 15-30, 15-91, 15-125 (HA-17 tension)</p> <p>077.108.238</p>		<p>Ref : 125416 Tension indicator flange Singer 201-2, 1200-1 (HA-17 tension)</p> <p>077.125.416</p>
	<p>Ref : 546949 Tension indicator Singer 15-30 (HA-17 tension)</p> <p>077.546.949</p>		<p><small>Ref : 125314 Tension spring Singer 237-239-240-241-242-247-247AP-248-248-250- 251-252-257-259-288-338-401-401A-403-403A- 404-416-500-502-503-507-509-513-522-527-533- 600-603-604-620-620E31-625-626-628-629-630- 630E-635-636-638-639-640E-645-646-648-649- 1247-1263-1280-1288-1802-1803-1812-1852-1862- 1872-1873-2404-2430-3101-3102-3103-3105- 4305-4825-4828-4830-6102-6104-6105-6106-6110- 6120-6130-6136-6146-6152-6156-6174-6184- 6201-6202-6211-6212-6214-6215-6217-6606-7101- 8502-8505-8518-8602-8605-8606-8610-8614- 8618-8734-9612-9900</small></p> <p>077.125.314</p>		<p>Ref : 179602 Tension thread guide For 422403-455</p> <p>077.179.602</p>
	<p>Ref : 547152 Tension thread guide For 422403-455</p> <p>077.547.152</p>		<p>Ref : 174393-656 Tension cap Singer 750, 755-758 (153564-451, 172820- 656)</p> <p>077.174.393</p>		<p>Ref : 0011337401 Thread regulator Bernina 1000+</p> <p>077.001.133</p>
	<p>Ref : 314676-454 Tension length knob Singer 9005, 9911</p> <p>077.314.676</p>		<p>Ref : 025710235 Tension washer Brother 920D, 934D</p> <p>077.257.102</p>		<p>Ref : 108263001 Thread tension disc Babylock EM1, EM2-Espree Bernina Deco 500, Deco 600 Brother PE100-PE150- PE180D-PE200</p> <p>087.108.263</p>

DIJELOVI ZATEZNIKA KONCA - PIECES POUR TENSIONS - TENSION PARTS - FADENSPANNUNGSTEILE

 <p>Ref : 115187-101 Tension disc Brother 626D-634D-834DP-920D-934D 087.115.187</p>	 <p>Ref : 127848001 Needle tension spring Brother 626D-634D-834D 077.127.848</p>	 <p>Ref : 127849001 Upper looper tension spring Brother 626D-634D-834D-920D-934D 077.127.849</p>
 <p>Ref : 137874004 Tension dial Babylock BL7500-BL8000-BL8500 Brother 845 077.137.874</p>	 <p>Ref : 174395 Nut tension For 172820-656 077.174.395</p>	 <p>Ref : 179602 Thread guide tension For 422403 077.179.602</p>
 <p>Ref : 244048 Tension disc Singer 111W 085.244.048</p>	 <p>Ref : 353250 Thread guide tension For 422403 077.353.250</p>	 <p>Ref : 4114248-03 Tension knob Husqvarna 6440, 6460 077.411.424</p>
 <p>Ref : 44633 Tension disc Singer 206-206K-206W-306-306K-306W 077.044.633</p>	 <p>Ref : 4559 Tension washer White 510 077.004.559</p>	 <p>Ref : 4561 Tension friction washer White 510 077.004.561</p>
 <p>Ref : 4563 Tension clip ring White 510 077.004.563</p>	 <p>Ref : 531886-451 Tension cap Singer 4538, 6021, 6221 077.531.886</p>	 <p>Ref : 547152 Thread guide tension For 422403 077.547.152</p>
 <p>Ref : X05012-000 Stud tension Brother 626D-634D-834DP-920D-934D 077.501.200</p>	 <p>Ref : X05015-000 Tension dial Brother 626D-634D-834DP-920D-934D 077.501.500</p>	 <p>Ref : X58687101 Thread tension spring Brother PE100-PE150-PE180D-PE200 Babylock EMI1-EMI2-Espree Bernina Deco 500, Deco 600 077.058.687</p>
 <p>Ref : X75618-001 Tension bracket Brother 626D-634D-834DP-920D-934D 077.075.618</p>	 <p>Ref : X75627-001 Plate tension Brother 626D-634D-834DP-920D-934D 077.075.627</p>	 <p>Ref : X75883-001 Spring tension Brother 626D-634D-834DP-920D-934D 077.075.883</p>
 <p>Ref : X75910-001 Tension dial Brother 626D-634D-834DP-920D-934D 077.075.910</p>	 <p>Ref : X75910-002 Tension dial Brother 626D-634D-834DP-920D-934D 078.075.910</p>	 <p>Ref : X75910-003 Tension dial (green) Brother 626D-634D-834DP-920D-934D 077.075.911</p>
 <p>Ref : X75910-004 Tension dial Brother 626D-634D-834DP-920D-934D 077.075.912</p>	 <p>Ref : X77167-001 Needle tension dial left Brother PL1050-640D 077.077.167</p>	 <p>Ref : X77167-002 Needle tension dial right Brother PL1050-640D 078.077.167</p>
 <p>Ref : X77167-003 Upper looper tension dial Brother PL1050-640D 077.077.168</p>	 <p>Ref : X77167-004 Lower looper tension dial Brother PL1050-640D 077.077.169</p>	 <p>Ref : X77175-001 Pin tension release Brother 640D-920-PL1050 077.077.175</p>

DIJELOVI ZATEZNIKA KONCA - PIECES POUR TENSIONS - TENSION PARTS - FADENSPANNUNGSTEILE

 <p>Ref : X77235-000 Tension disc Brother PL1050-640D-925D-935D-929D-1034D</p> <p>077.077.235</p>	 <p>Ref : X77236-000 Tension disc (A) Brother PL1050-640D-925D-935D-929D-1034D</p> <p>077.077.236</p>	 <p>Ref : X77341-001 Spring needle tension Brother 920D-934D</p> <p>077.077.341</p>
 <p>Ref : X77720-001 Tension dial yellow Brother 925D-929D-935D</p> <p>077.077.720</p>	 <p>Ref : X77720-002 Tension dial red Brother 925D-929D-935D</p> <p>078.077.720</p>	 <p>Ref : X77720-003 Tension dial green Brother 925D-929D-935D</p> <p>077.077.721</p>
 <p>Ref : X77720-004 Tension dial blue Brother 925D-929D-935D</p> <p>077.077.722</p>	<p>Ref : X77853-001 Tension releaser Brother 925D-929D-935D</p> <p>077.077.853</p>	 <p>Ref : XA9449051 Tension release plate Brother ULT2001-ULT2002 Babylock ESG Ellageo</p> <p>077.009.449</p>
<p>Ref : XB0898-001 Yellow tension dial Brother 1034D</p> <p>077.000.898</p>	<p>Ref : XB0898-002 Red tension dial Brother 1034D</p> <p>078.000.898</p>	<p>Ref : XB0898-003 Green tension dial Brother 1034D</p> <p>077.000.899</p>
<p>Ref : XB0898-004 Blue tension dial Brother 1034D</p> <p>077.000.900</p>	<p>Ref : XB0934-001 Tension release Brother 1034D</p> <p>077.000.934</p>	 <p>Ref : X76023-001 Spring tension thread Brother PL1500-PL1600-PL2000</p> <p>077.076.023</p>
<p>Ref : 357734-002 Tension indicator knob Singer 5430</p> <p>077.357.734</p>	 <p>Ref : X75729-001 Tension dial Brother 626D-634D-834DP-920D-934D</p> <p>077.075.729</p>	 <p>Ref : X75981-001 Tension disc Brother PL1500-PL1600-PL2000</p> <p>077.075.981</p>
<p>Ref : 141000037 Tension release plate Husqvarna</p> <p>077.141.037</p>	 <p>Ref : C6088-01A-05 Tension knob Babylock BL101</p> <p>077.608.805</p>	<p>Ref : 3705070-19 Tension Elna 200 series Necchi 3537</p> <p>077.370.508</p>
<p>Ref : 047251042 Spring pin Brother PL1500-PL2000-PL1600-PL1050-640D-925D-935D-929D-1034D</p> <p>077.472.510</p>	 <p>Ref : X81101001 = X81101051 Tension roller set Babylock ESE, ESE2, ESL Brother PC8200, PC8500</p> <p>077.081.101</p>	
 <p>Ref : 44879-482 = 44879-458, 44879-463, 44879-453, 44679-461 Tension spring cup Singer 237-239-240-241-242-247-247AP-248-250-251-252-257-258-259-288-300-360-400-403-500-502-507-509-513-522-527-533-543-600-603-604-620-620E-625-626-628-629-630-630E-635-636-638-639-640E-645-646-649-1247-1263-1280-1288-1802-1803-1812-1852-1862-1872-1873-2404-2430-3101-3102-3103-3105-4825-4828-4830-6102-6104-6105-6106-6110-6120-6130-6136-6146-6152-6156-6174-6184-6201-6202-6211-6212-6214-6215-6217-6606-8734-9900</p> <p>077.044.881</p>		
 <p>Ref : 605-3305-01A Tension spring Babylock EA-605</p> <p>077.605.330</p>	<p>Ref : 50327 Tension stud Singer 31-15, 27, 66, 99</p> <p>077.150.327</p>	<p>Ref : 026020235 Tension washer Brother PL1500-PL2000-PL1600-PL1050-640D-925D-935D-929D</p> <p>077.260.202</p>

DIJELOVI ZATEZNIKA KONCA - PIECES POUR TENSIONS - TENSION PARTS - FADENSPANNUNGSTEILE

<p>Ref : 4122777-01 Tension Husqvarna 1050-1090-1100</p> <p>078.412.277</p>	<p>Ref : 531885-454 Tension indicator Singer 4538-6021-6221</p> <p>077.531.885</p>	 <p>Ref : X57682051 Tension spring Babylock BL9500 Brother PC5000-PC6000</p> <p>077.576.820</p>
 <p>Ref : X75992-001 Washer tension upper Brother PL1050-PL1500-PL2000-PL1600-640D-925D-929D-935D-1034D</p> <p>077.075.992</p>	<p>Ref : X76873-001 Thread tension base Brother PL1500-PL1600-PL2000</p> <p>077.076.873</p>	<p>Ref : X76877-001 Release mechanism Brother PL1500-PL1600-PL2000-PL1050-640D</p> <p>077.076.877</p>
 <p>Ref : X76878-000 Nut tension Brother PL1050-PL1500-PL2000-PL1600-640D-925D-929D-935D-1034D</p> <p>077.076.878</p>	 <p>Ref : X76879-000 Washer wave tension Brother PL1050-PL1500-PL2000-PL1600-640D-925D-929D-935D-1034D</p> <p>077.076.879</p>	 <p>Ref : X76881-001 Thread tension dial (yellow) Brother PL1500-PL1600-PL2000</p> <p>077.076.881</p>
 <p>Ref : X76881-002 Thread tension dial (red) Brother PL1500-PL1600-PL2000</p> <p>078.076.881</p>	 <p>Ref : X76881-003 Thread tension dial (green) Brother PL1500-PL1600-PL2000</p> <p>077.076.882</p>	 <p>Ref : X76881-004 Thread tension dial (blue) Brother PL1500-PL1600-PL2000</p> <p>077.076.883</p>
 <p>Ref : X76882-001 Clutch tension Brother PL1050-PL1500-PL2000-PL1600-640D-925D-929D-935D-1034D</p> <p>077.076.884</p>	 <p>Ref : X77414-001 Tension spring Brother 925D-929D-935D-1034D</p> <p>077.077.414</p>	