


















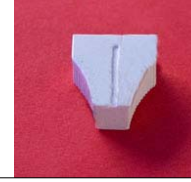











## DUGMAD RAZNO - DIALS/BUTTONS/KNOBS - HANDRADBUCHSE/EISNTTELLKNÖPFEN

	<p><b>Ref : 0012697004</b> Knob f/ needle position Bernina 1004-1530</p> <p><b>077.001.269</b></p>		<p><b>Ref : 0028667003</b> Feed dog knob Bernina 1004-1005-1006- 1008-1010-1020-1030- 1080-1113-1130-1230- 1530</p> <p><b>077.286.661</b></p>		
	<p><b>Ref : 308.172.141</b> Stitch width knob Bernina 830-831</p> <p><b>077.308.172</b></p>		<p><b>Ref : X77123-001</b> Knob control Bernina 640D-920D- 934D-PL1050</p> <p><b>077.077.123</b></p>		<p><b>Ref : 138652055</b> Stop motion knob Brother 7029-PS1200-VX800 -VX807-VX809-VX810- VX880-VX890-VX920-VX940 -VX950-VX970-VX980- VX1010-VX1020</p> <p><b>077.138.652</b></p>
	<p><b>Ref : X53535151</b> Knob F-Z adjustable Brother VX1010, VX1020</p> <p><b>077.053.535</b></p>		<p><b>Ref : X53536051</b> Knob needle position Brother VX1010, VX1020</p> <p><b>077.053.536</b></p>		<p><b>Ref : 130882001</b> Push button Brother VX707, VX710</p> <p><b>077.130.882</b></p>
	<p><b>Ref : X00033102</b> Stitch length button Brother VX807, VX810</p> <p><b>077.033.102</b></p>		<p><b>Ref : X00033104</b> Stitch length button Brother VX809</p> <p><b>077.033.104</b></p>		<p><b>Ref : X54361051</b> Stop motion knob Brother XL2010-XL2015- XL2021-XL2022-XL2025- XL2030-XR29- XR23- VX1100-VX1200</p> <p><b>077.054.361</b></p>
	<p><b>Ref : 137107-451</b> Stitch length button Singer 6408-6412-6423- 6416</p> <p><b>077.137.107</b></p>		<p><b>Ref : 163436</b> Stitch selector button Singer 600-603-604-620- 625-629-630-635-636-638- 639-640E-645-646-649</p> <p><b>077.163.436</b></p>		<p><b>Ref : 286548-451</b> Pattern knob Singer 9217-9240</p> <p><b>077.286.548</b></p>
	<p><b>Ref : 314239-460</b> Pattern select knob Singer 9410-9417-9420</p> <p><b>077.314.239</b></p>		<p><b>Ref : 314676-454</b> Tension length knob Singer 9005-911</p> <p><b>077.314.676</b></p>		<p><b>Ref : 356115-452</b> Reverse knob Singer 3314-3317-3343- FM17-FM19</p> <p><b>077.356.115</b></p>
	<p><b>Ref : 356204-453</b> Needle position knob Singer 5050-5605-5610-5705- 5710-5805-5806-5810-5812- 5814-5816-5818-5825-5830- 5838-57817-57820-57825- FM17-FM22</p> <p><b>077.356.204</b></p>		<p><b>Ref : 356653</b> Reverse button Singer 5705-5812-5814- 5816-5818-5825-5830</p> <p><b>077.356.650</b></p>		<p><b>Ref : 356961-451</b> Needle position knob Singer FM17-FM22</p> <p><b>077.356.961</b></p>
	<p><b>Ref : 356961-452</b> Needle position knob Singer FM17</p> <p><b>078.356.961</b></p>		<p><b>Ref : 357699-900</b> Control lever knob Singer 5417-5430</p> <p><b>077.357.699</b></p>		<p><b>Ref : 357699-904</b> Control knob dark grey Singer CG500-CG550</p> <p><b>077.357.700</b></p>
	<p><b>Ref : 357699-905</b> Control knob gray Singer CG500-CG550</p> <p><b>078.357.699</b></p>		<p><b>Ref : 357738-003</b> Buttonholder knob Singer 5417-5430</p> <p><b>077.357.738</b></p>		<p><b>Ref : 408-5103-05A</b> Stitch width feed regulator knob Babylock BL3200, BL3-408, BL3- 418, BL4-428, BL4-428D, BL4-738, BL4-738D, BL4-838D, BL5180, BL5280E, BL5280ED, BL5360ED, BL5380ED, BL80, BL90, BLSE200, BLSE300, BL415, BL428K</p> <p><b>078.408.511</b></p>
	<p><b>Ref : 4112542-03</b> Knob Husqvarna 1040</p> <p><b>077.411.254</b></p>		<p><b>Ref : 4116140-01</b> Pattern select knob Husqvarna 3610</p> <p><b>077.411.614</b></p>		<p><b>Ref : 4117708-03</b> Pattern knob Husqvarna 90-S100- S110-S120-S140-S150- S160-S180-S185-S190</p> <p><b>077.411.770</b></p>

## DUGMAD RAZNO - DIALS/BUTTONS/KNOBS - HANDRADBUCHSE/EISNTSELLKNÖPFEN

	<p><b>Ref : 444896-456</b> Zigzag control knob Singer 240</p> <p><b>077.444.896</b></p>		<p><b>Ref : 446398-451</b> Needle position knob Singer 4522-4525-4526-4528-4530-4538-6021-6201-6202-6210-6211-6212-6214-6215-6217-6221</p> <p><b>077.446.398</b></p>		<p><b>Ref : 618783</b> Light switch knob Singer 457</p> <p><b>077.618.783</b></p>
	<p><b>Ref : 76438</b> Pattern select knob Singer 2638-2662</p> <p><b>077.764.380</b></p>	<p><b>Ref : SE100-27</b> Wing screw (three arm knob)</p> <p><b>077.100.270</b></p>	<p><b>Ref : 100043053</b> Stop motion stop screw Brother 7029-PS1200-VX520-VX540-VX560-VX620-VX640-VX660-VX707-VX710-VX760-VX800-VX807-VX809-VX810-VX880-VX890-VX920-VX940-VX950-VX970-VX980-VX1010-VX1020-VX1100-VX1200-XL2010-XL2015-XL2021-XL2022-XL2025-XL2030-XR23-XR29</p> <p><b>077.043.053</b></p>		
<p><b>Ref : 4114248-03</b> Tension knob Husqvarna 6440-6460</p> <p><b>077.411.424</b></p>		<p><b>Ref : 137685002</b> Selecting button Babylock BL7500-BL8000-BL8500 Brother 845</p> <p><b>077.137.685</b></p>		<p><b>Ref : X54269052</b> Dial select Brother PS1200</p> <p><b>077.054.269</b></p>	
	<p><b>Ref : X56877051</b> Select gear Brother PS1900</p> <p><b>077.056.877</b></p>		<p><b>Ref : 4122987-01</b> Lift arm width selector Husqvarna 315-605</p> <p><b>077.412.298</b></p>		
	<p><b>Ref : 312248-451</b> Pattern selector Singer 510-530</p> <p><b>077.312.248</b></p>		<p><b>Ref : 421864-451</b> Stitch length selector Singer 6100-7100-8100</p> <p><b>077.421.864</b></p>		<p><b>Ref : 137686005</b> Z manual button Babylock BL7500-BL8000-BL8500 Brother 845</p> <p><b>077.137.686</b></p>
<p><b>Ref : 137749001</b> BH switch Babylock BL7500-BL8000-BL8500 Brother 845</p> <p><b>077.137.749</b></p>		<p><b>Ref : 138116002</b> Button F manual Babylock BL7500-BL8000-BL8500 Brother 845</p> <p><b>077.138.116</b></p>		<p><b>Ref : X77124-001</b> Dial lower knife Brother 640D-920D-934D-PL1050</p> <p><b>077.077.124</b></p>	
	<p><b>Ref : X76881-001</b> Thread tension dial (yellow) Brother PL1500-PL1600-PL2000</p> <p><b>077.076.881</b></p>		<p><b>Ref : X76881-002</b> Thread tension dial (red) Brother PL1500-PL1600-PL2000</p> <p><b>078.076.881</b></p>		<p><b>Ref : X76881-003</b> Thread tension dial (green) Brother PL1500-PL1600-PL2000</p> <p><b>077.076.882</b></p>
	<p><b>Ref : X76881-004</b> Thread tension dial (blue) Brother PL1500-PL1600-PL2000</p> <p><b>077.076.883</b></p>		<p><b>Ref : X57938051</b> Z-D dial Brother VX1100-VX1200</p> <p><b>077.057.938</b></p>		<p><b>Ref : X54416050</b> Feed dial gear Brother XL2010-XL2015-XL2021-XL2022-XL2025-XL2030-XR29-XR23</p> <p><b>077.054.416</b></p>
	<p><b>Ref : 141000014</b> Dial pattern select Husqvarna</p> <p><b>077.141.014</b></p>		<p><b>Ref : 353078-451</b> Feed dial Singer 7108-7174-7180</p> <p><b>077.353.078</b></p>		<p><b>Ref : 381605</b> Dial stitch control Singer 900</p> <p><b>077.381.605</b></p>
	<p><b>Ref : 412221-20</b> Stitch length dial Elna Super 6</p> <p><b>077.412.221</b></p>		<p><b>Ref : 446428-456</b> Feed dial Singer 3314-3317-3343-6201-6202-6211-6212-6214-6215-6217</p> <p><b>077.446.428</b></p>		<p><b>Ref : 76439</b> Stitch length control dial Juki HZL-35Z Singer 2628-2662</p> <p><b>077.076.439</b></p>

## DUGMAD RAZNO - DIALS/BUTTONS/KNOBS - HANDRADBUCHSE/EISNTTELLKNÖPFEN

	<p><b>Ref : 76739</b> Pattern dial Singer 132Q-140Q</p> <p><b>077.076.739</b></p>		<p><b>Ref : X75910-001</b> Tension dial Brother 626D-634D-834DP-920D-934D</p> <p><b>077.075.910</b></p>		<p><b>Ref : X75910-002</b> Tension dial Brother 626D-634D-834DP-920D-934D</p> <p><b>078.075.910</b></p>
	<p><b>Ref : X75910-003</b> Tension dial green Brother 626D-634D-834DP-920D-934D</p> <p><b>077.075.911</b></p>		<p><b>Ref : X75910-004</b> Tension dial Brother 626D-634D-834DP-920D-934D</p> <p><b>077.075.912</b></p>		<p><b>Ref : X77167-001</b> Needle tension dial left Brother PL1050-640D</p> <p><b>077.077.167</b></p>
	<p><b>Ref : X77167-002</b> Needle tension dial right Brother PL1050-640D</p> <p><b>078.077.167</b></p>		<p><b>Ref : X77167-003</b> Needle tension dial upper Brother PL1050-640D</p> <p><b>077.077.168</b></p>	<p><b>Ref : R1A1853210</b> Needle threader knob Babylock BLQ2 Singer Quantum L-500</p> <p><b>077.185.321</b></p>	
	<p><b>Ref : C6088-01A-05</b> Tension knob Babylock BL101</p> <p><b>077.608.805</b></p>		<p><b>Ref : 163721-656</b> Buttonhole knob Singer 600-603-604-620-625-626-628-629-630-630E-635-635E-636-638-639-640E-645-646-648-648E-649</p> <p><b>077.163.721</b></p>		<p><b>Ref : 357697-901</b> Buttonhole knob Singer 5417-5430</p> <p><b>077.357.697</b></p>
			<p><b>Ref : 357736-004</b> Reverse knob Singer 5417-5430-6038</p> <p><b>077.357.736</b></p>	<p><b>Ref : 312664-465</b> Stitch length knob Singer 4610-4613-4617-4623</p> <p><b>077.312.664</b></p>	
<p><b>Ref : E4A0053210</b> Stitch selector knob Singer 3503-3507-3514-3515-3709-3722-6550-7350</p> <p><b>077.053.210</b></p>		<p><b>Ref : 256</b> Stop motion knob screw Brother 320-360-451-461-661-681-741-751-761-1681-XL711-XL781-XL791-XL851-XL1351-XL1561-XL1791 Singer 15CL</p> <p><b>077.256.000</b></p>			
<p><b>Ref : 79056</b> Stitch length control dial Singer 14J334</p> <p><b>077.079.056</b></p>		<p><b>Ref : V8ER003210</b> Stitch length dial Singer 2250-2259-2263 (Simple)</p> <p><b>077.003.210</b></p>		<p><b>Ref : XB0898-003</b> Green tension dial Brother 1034D</p> <p><b>077.000.899</b></p>	
	<p><b>Ref : X77167-004</b> Lower looper tension dial Brother PL1050-640D</p> <p><b>077.077.169</b></p>	<p><b>Ref : XB0898-002</b> Red tension dial Brother 1034D</p> <p><b>078.000.898</b></p>		<p><b>Ref : 137874004</b> Tension dial Babylock BL7500-BL8000-BL8500 Brother 845</p> <p><b>077.137.874</b></p>	
	<p><b>Ref : X05015-000</b> Tension dial Brother 626D-634D-834DP-920D-934D</p> <p><b>077.501.500</b></p>		<p><b>Ref : X77720-001</b> Tension dial Brother 925D-929D-935D</p> <p><b>077.077.720</b></p>		<p><b>Ref : X77720-002</b> Tension dial Brother 925D-929D-935D</p> <p><b>078.077.720</b></p>
	<p><b>Ref : X77720-003</b> Tension dial Brother 925D-929D-935D</p> <p><b>077.077.721</b></p>		<p><b>Ref : X77720-004</b> Tension dial Brother 925D-929D-935D</p> <p><b>077.077.722</b></p>	<p><b>Ref : XB0898-001</b> Yellow tension dial Brother 1034D</p> <p><b>077.000.898</b></p>	

## DUGMAD RAZNO - DIALS/BUTTONS/KNOBS - HANDRADBUCHESE/EISNTSELLKNÖPFEN

	<p><b>Ref : 750013002</b> Button reverse Janome 3015</p> <p><b>077.750.013</b></p>	<p><b>Ref : XA9976021</b> Button reverse Brother LS2125-LS2125i</p> <p><b>077.009.976</b></p>		<p><b>Ref : 179904-457</b> Button reverse Singer 1872-2404</p> <p><b>077.179.904</b></p>
	<p><b>Ref : 356653-466</b> Button reverse Singer 5017-5028-5040- 5805-5806-5808-5810- 57820-57825</p> <p><b>077.356.650</b></p>	 <p><b>Ref : 421933-451</b> Button reverse Singer 714-717 School-6100- 6102-6104-6105-6106-6110- 6120-6130-6136-6146-6152- 6156-6174-6184-7100-7101- 7102-7104-7105-7106-7108- 7110-7114-7136-7171-7174- 7180-8100</p> <p><b>077.421.933</b></p>	<p><b>Ref : K6B0323210</b> Button reverse Singer 2273</p> <p><b>078.323.210</b></p>	
<p><b>Ref : V6E0133210</b> Button reverse Singer 2250-2259-2263 (Simple)</p> <p><b>077.133.210</b></p>	<p><b>Ref : 0012697004</b> Knob for needle position Bernina 1004-1530</p> <p><b>077.001.269</b></p>		<p><b>Ref : 312229-451</b> Needle position dial Singer 530</p> <p><b>077.312.229</b></p>	

