























## GRIJPER- & MESSENHOUDERS - PORTE BOUCLEUR & COUTEAUX LOOPERS & KNIFE HOLDERS - MESSER- & GREIFERHALTER

 <p><b>Ref : 418-6404-01F</b> Looper holder Babylock BL3460-BL5360- BL4/736D-BLSE200- BLSE300 <b>077.418.640</b></p>	 <p><b>Ref : 127777-001</b> Looper holder lower Brother 523N, 525N <b>077.127.777</b></p>	 <p><b>Ref : XB0641-001</b> Looper holder lower Brother 929D, 1034D <b>077.010.641</b></p>
 <p><b>Ref : X77090-001</b> Looper holder chaining tongue Brother 925D, 935D <b>077.077.090</b></p>	 <p><b>Ref : X77091-000</b> Stitch tongue holder Brother 640D-920D-925D- 934D-920D-935D-PL1050 <b>077.077.091</b></p>	 <p><b>Ref : 376838</b> Looper holder lower Singer 14U <b>077.376.838</b></p>
 <p><b>Ref : 376892</b> Looper holder upper Singer 14U65, 14U85, 14U285 <b>077.376.892</b></p>	 <p><b>Ref : 550409</b> Looper holder lower Singer 14U544, 14U554, 14U555 <b>077.550.409</b></p>	 <p><b>Ref : 550587</b> Looper holder upper Singer 14U544, 14U554 <b>077.550.587</b></p>
 <p><b>Ref : 550597</b> Looper holder upper Singer 14U555 <b>077.550.597</b></p>	 <p><b>Ref : G11512</b> Looper supporter lower Singer 14T957 <b>077.011.512</b></p>	 <p><b>Ref : A10262000</b> Connecting arm upper looper Singer 14T948DS <b>077.102.620</b></p>
 <p><b>Ref : XB0356-050</b> Knife holder Brother 929D <b>077.010.356</b></p>	 <p><b>Ref : 412586</b> Knife holder All Singer 14U serger <b>077.412.586</b></p>	 <p><b>Ref : X75103-000</b> Blade holder lower Brother 730DE, 760DE <b>077.075.103</b></p>
 <p><b>Ref : X75139-001</b> Blade holder upper Brother 730DE, 760DE <b>077.075.139</b></p>	 <p><b>Ref : X05077-001</b> Lever lower looper Brother PL1050 <b>077.005.077</b></p>	 <p><b>Ref : X76769-001</b> Lever upper looper Brother PL1500-1600- 2000 <b>077.076.769</b></p>
 <p><b>Ref : X77778-001</b> Lower looper lever Brother 925D, 935D <b>077.077.778</b></p>	 <p><b>Ref : X77666-001</b> Shaft upper blade Brother 925D, 935D <b>077.077.666</b></p>	 <p><b>Ref : 72639</b> Arm looper lower Singer 14J334 <b>077.072.639</b></p>
 <p><b>Ref : 72640</b> Arm looper upper Singer 14J334 <b>077.072.640</b></p>		