

## GUMENI AMORTIZERI - SCHOKDEMPERS - AMORTISSEURS - CUSHIONS - PUFFER



**Ref : 11401**  
Cone holder  
White 734, 734D, 734DW,  
534, 534D, 2000  
**077.011.401**



**Ref : 126540000**  
Rubber cushion  
Brother 523N-524N-525N-  
526-526D-546-546D-626D-  
634D-834DP  
Husqvarna 431-435-440-234-  
535D-444  
**077.126.540**



**Ref : 130157051**  
Rubber cushion  
Brother PS1700-PS1750  
Babylock BL2100-  
BL6000-BL2150-ESI  
**077.130.157**



**Ref : 174124=172203**  
Rubber leg cushion  
Singer 348-348K-401-401A-403-  
403A-413-457-502-522-527-534  
-600-600E-620-625-626-626E-  
628-629-630-635-636-638-639-  
640E-645-646-649-750-755-758  
**077.174.124**



**Ref : 194407-002**  
Rubber leg cushion  
Singer 221-301-337-338-  
477-478-500-503  
**077.194.407**



**Ref : 313909-451 = 353559-451**  
Rubber leg cushion  
Singer 2210, 2440, 2502, 2503,  
2504, 2505, 2515, 2517, 2530, 2543,  
3270, 3314, 3317, 3343, 4600, 5050,  
5812, 5814, 5816, 5818, 5825, 5830,  
5838, 6200, 6233, 6234, 6235, 7035,  
9015, 9018, 9027, 9032, 9836,  
57825, CM17, DX14, FM17, SM14  
**077.313.909**



**Ref : 382337R**  
Rubber cushion  
Singer 770, 775, 778,  
900-3, 920-3, 925, 1036  
**077.382.337**



**Ref : 45780**  
Rubber leg cushion  
Singer 221 Featherweight  
**077.045.780**



**Ref : 313909 = 7280**  
Rubber cushion  
White 1640  
**077.313.909**



**Ref : P60899**  
Cushion  
Fits most Sergers  
**077.060.899**



**Ref : X55942-150**  
Rubber leg cushion  
Babylock BL6200-BL6700-BL9500-ESI-  
ESI2-EM1-EM2  
Bernina Deco 500, Deco 600  
Brother PC5000-PC6000-PC7000-  
PC7500-PC8000-PC8895-PE100-  
PE150-PE180D-PE200-PS1000-  
PS1250-PS1800-PS1900-PS1950-  
PS2100  
**077.055.942**



**Ref : X75545-000**  
Rubber cushion  
Brother 920D/925D  
**077.075.545**



**Ref : XA1805050 = XA1805021, XA1805051**  
Rubber cushion  
Babylock BL40, BL40A (Grace), BL137A2 (Sofia  
2), BL200A (Elizabeth), BLMY (Melody), BLN  
(Esante), BLSO (Ellisimo), BLTP (Tempo), ESN  
(Encore), ESE, ESE2, ESP (Espire), BLCC  
(Crafter's Choice), BLCC2 (Crafter's Choice),  
BLDC, BLDC2 (Decorator's Choice), BLQC,  
BLG (Elegante), BLG2 (Elegante 2), INT  
Brother CS8060, CS8100, CS8150, CS8200,  
NV4000D, NX200, NX400, NX600, PC2800,  
PC3000, PC6500, PC8200, PC8500  
**077.180.505**



**Ref : XA9386051**  
Rubber cushion  
Brother ULT2001-ULT2002  
Babylock ESG  
**077.938.605**



**Ref : 739064003 = 395710-79**  
Rubber cushion  
Babylock BL18A (Natalie)  
Janome 659, 660  
Elna 3210, 3230  
**077.739.064**



**Ref : 313909 = H70043000**  
Free arm rubber cushion  
Singer XL5000, XL6000,  
3116  
**077.313.909**



**Ref : 618039001**  
Rubber cushion  
Janome 630, 640  
**077.618.039**



**Ref : 647009002**  
Rubber cushion  
Janome 2000-7500 Top  
bobbin loading machines  
**077.647.009**



**Ref : 410208**  
Rubber cushion leg  
Singer 14U13A-14U23A-  
14U45A-14U53A-14U64A-  
14U85B-14U286-14U444B-  
14U454B-14U595-Pro4D  
**077.410.208**



**Ref : 604228**  
Block mtr.  
Singer 900-2000  
**077.604.228**



**Ref : 604229**  
Insert mtr. Shaft  
Singer 900  
**077.604.229**