

## KLIZNE PLOČICE - PLAQUES GLISSIERES - SLIDE PLATES - SCHIEBEPLATTE



**Ref : 30196 = 395526-06**  
Slide plate  
Elna 300-1500-1600  
Riccar REC6000

**077.030.196**



**Ref : 467570-10**  
Slide plate  
Elna 5000-6000-7000-8000  
-9000-Club-Diva  
Note : use if original slide plate is plastic

**077.467.570**



**Ref : 468700-40**  
Slide plate  
Elna 5000-6000-7000-8000-9000-Club-Diva  
Note : use if original slide plate is metal

**077.468.700**



**Ref : 387427**  
Slide plate  
Singer Quantum XL5000,  
Quantum XL6000

**077.387.427**



**Ref : KM32750 = 32750, DP32750**  
Slide plate  
Kenmore 158.14000, 158.14001,  
158.541, 158.15030, 158.16520,  
158.17500, 158.17501, 158.17510,  
158.17511, 158.17520, 158.17530,  
158.17540, 158.17550, 158.17560,  
158.17570, 158.17571, 158.17572,  
158.542, 158.921

**077.032.750**



 
**Ref : KM35815 = 35815, 36204**  
Slide plate  
Kenmore 158.13190, 158.13250, 158.13470,  
158.13570, 158.14003, 158.14100, 158.14300,  
158.14301, 158.15150, 158.17000, 158.17001,  
158.17010, 158.17011, 158.17012, 158.17030,  
158.17031, 158.17032, 158.17033, 158.17200,  
158.17300, 158.17310, 158.17490, 158.17740,  
158.17741, 158.18020, 158.18021, 158.18023,  
158.18024, 158.18030, 158.18031, 158.18032,  
158.18033, 158.18034, 158.18130, 158.18131,  
158.18140, 158.18141, 158.18150

**077.035.815**




**Ref : 15147 = 125338** Slide plate universal  
Brother 320-461-761-XL711  
Kenmore 158.130, 158.13010, 158.13011, 158.13031, 158.13032, 158.13033, 158.13041, 158.220, 158.221, 158.320, 158.321, 158.330, 158.331, 158.350, 158.351, 158.352,  
158.353, 158.370, 158.371, 158.372, 158.373, 158.4180, 158.431, 158.432, 158.433, 158.440, 158.441, 158.442, 158.443, 158.444, 158.445, 158.460, 158.461,  
158.462, 158.463, 158.470, 158.471, 158.472, 158.473, 158.480, 158.481, 158.500, 158.501, 158.502, 158.503, 158.504, 158.505, 158.620, 158.650, 158.750, 158.841, 158.842  
Riccar 601, 608, SZ702  
Singer 237, 239, 15-30, 15-88, 15-90, 15-91, 15-125, 15CL  
White 944

**077.015.147**

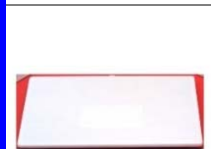

**Ref : 720003006**  
Slide plate  
Janome Combi DX

**077.720.003**

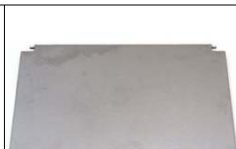 

**Ref : SP8NS**  
Slide plate  
Janome 640-641-642-660-  
670-671-672-673-674-676-  
679-680-682-692  
Necchi 534FB-536FB

**077.800.000**



**Ref : SP1**  
Slide plate  
Remington Classic

**077.300.780**



**Ref : SP26**  
Slide plate  
Montgomery Ward

**077.000.026**



**Ref : SP65**  
Slide plate  
Nelco  
Sanua

**077.000.065**



**Ref : 732013202**  
Slide plate  
Janome S650,  
Classmate S750

**077.732.013**



 
**Ref : 732126003**  
Slide plate  
Janome S650, S750

**077.732.126**



**Ref : 610017009**  
Slide plate  
Necchi 3832

**077.610.017**

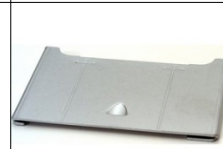

**Ref : 116080 = 422229**  
Slide plate  
Singer 500-522-527-533-534-  
538-560-563-800 series-6102-  
6104-6105-6106-6110-6120-  
6130-6136-6146-6152-6156-  
6184-6513-6522-6528-6533-  
6543-6544-6548-7110-8734

**077.116.080**



**Ref : 168081**  
Slide plate  
Singer 117

**077.168.081**



**Ref : 172956**  
Slide plate  
Singer 417-714-717-719-  
734-737-750-755-756-  
758-771

**077.172.956**



**Ref : 179982**  
Slide plate  
Singer 5605-5610-5705-  
5710-9936

**077.179.982**



**Ref : 310739-451**  
Slide plate  
Singer 502-507-509-513-  
514-518-543

**077.310.739**



**Ref : 313166**  
Slide plate  
Singer 4613-4617-4623-4663  
-6234-6235-6250-6251-6267-  
6268-9113-9117-9124-9133-  
9137-9143-9217-9224-9240

**077.313.166**



**Ref : 32569**  
Slide plate  
Singer 66, 66-6, 99, 99-  
13, 185, 185CL, 192,  
192K

**077.032.569**



**Ref : 356715**  
Slide plate  
Singer 4620, 5017, 5028, 5040,  
5050, 5802, 5805, 5806, 5808, 5810,  
5812, 5814, 5816, 5817, 5818, 5820,  
5825, 5830, 5838, 57817, 57820,  
57825, 9836, CG-550, CG-550C,  
FM17, FM19, FM21, FM22, HD102,  
HD110

**077.356.715**



**Ref : 382710**  
Slide plate  
Singer 724-770-774-775-  
776-778

**077.382.710**



**Ref : 382801**  
Slide plate  
Singer 900/3-920/3-925-  
1030-1036-2000-2001-  
2005-2010

**077.382.801**



**Ref : 408034**  
Slide plate  
Singer 1411U, 935U

**077.408.034**



**Ref : 445847**  
Slide plate  
Singer 290


**077.445.847**



**Ref : 446481** Slide plate  
Singer 1802-1803-1812-1852-1853-  
1862-1872-1873-2430-2502-2503-  
2504-2515-2530-3314-3317-3343-  
4522-4525-4526-4528-4530-4538-  
4825-4828-4830-6201-6202-6211-  
6212-6214-6215-6217-6221-7025-  
FM19

**077.446.481**

## KLIZNE PLO ICE - PLAQUES GLISSIERES - SLIDE PLATES - SCHIEBEPLATTE

 <p><b>Ref : 54512</b> Slide plate (front) Singer 128</p> <p><b>077.054.512</b></p>	 <p><b>Ref : 55503</b> Slide plate (back) Singer 127</p> <p><b>077.055.503</b></p>	 <p><b>Ref : 55504</b> Slide plate (front) Singer 27, 127</p> <p><b>077.055.504</b></p>
 <p><b>Ref : 66525</b> Slide plate Singer 101</p> <p><b>077.066.525</b></p>	 <p><b>Ref : 760003</b> Cover plate Singer 101 Babylock BL66, BL67 (Audrey) Singer 4166 White 1470, 1730, 1740, 2037, 2999</p> <p><b>077.760.003</b></p>	 <p><b>Ref : NB1293000</b> Cover plate Singer 3709-3722-3810- 3820-3825-6510-6550- 7312-7322-7350</p> <p><b>077.129.300</b></p>
 <p><b>Ref : 4125134-01</b> Slide plate Husqvarna Designer 1, Designer 2, Designer SE</p> <p><b>077.412.513</b></p>	 <p><b>Ref : 6307</b> Slide plate White 1570</p> <p><b>077.006.307</b></p>	 <p><b>Ref : 141000236</b> Slide plate Jaguar 55D White 2000, 1934D</p> <p><b>077.141.236</b></p>
 <p><b>Ref : 44838-891=446151</b> Slide plate Singer 1288-240-250-252-257-288- 327-328-329-337-338-347-348-360- 362-366-367-416K-418-457-466- 476-477-478-2302-2303-2304-2315 -2330-2404-2440-4325-6011-6012- 6021-6174-247AP-413K-413K13- 200-300-400-247-7101</p> <p><b>077.044.838</b></p>	 <p><b>Ref : 45358</b> Slide plate solid Singer 1200-1, 201</p> <p><b>077.045.358</b></p>	 <p><b>Ref : 12432LG</b> Slide plate Consew 210-220-230-231- 2230 Juki DDL555/227/5530/5550 Pfaff 130, 230 Singer 31-15</p> <p><b>085.012.432</b></p>
 <p><b>Ref : 163477=172015, 163800</b> Slide plate Singer 401-403-403A-404-414 -414G-500A-503-600-603-604 -620-620E31-625-626-628- 629-630-630E-635-636-638- 639-640E-645-646-648-649</p> <p><b>077.163.477</b></p>	 <p><b>Ref : 546018</b> Slide plate Singer 610, 680, 690</p> <p><b>077.546.018</b></p>	 <p><b>Ref : 314666</b> Slide plate Singer 4552-4562-4572-4610- 4622-5910-5932-6233-7033-7035 -9005-9008-9010-9015-9018- 9020-9022-9027-9030-9032-9034 -9044-9110-9130-9134-9210- 9323-9334-9408-9410-9416-9420 -9423-9430-9432-9444-93220</p> <p><b>077.314.666</b></p>
 <p><b>Ref : XC1270051</b> Slide plate Babylock BL500A (Jane), BLQP Brother PQ1300-PQ1500- PQ1500S</p> <p><b>077.001.270</b></p>	<p><b>Ref : SP22</b> Slide plate spring Brother</p> <p><b>077.000.022</b></p>	 <p><b>Ref : NSP6010</b> Slide plate Necchi 6010</p> <p><b>077.006.010</b></p>

