

 
 


 

 







 


 
 
 


## OPRUGE KLIZNIH PLOČICA - SLIDE PLATE SPRING - SCHIEBEPLATTFEDERN

<p><b>Ref : 76114</b> Slide plate spring (L) Singer 1500, 2662, 2638, 7422, 7424, 7426</p> <p><b>077.076.114</b></p>	<p><b>Ref : 313108</b> Slide plate spring (L) Singer 4617, 6234, 6235</p> <p><b>077.313.108</b></p>	<p><b>Ref : 314670</b> Slide plate spring (L) Singer 4552-4562-4572-4610- 4613-6233-7035-9005-9008-9010- 9015-9018-9020-9022-9027-9030- 9032-9034-9044-9110-9130-9210- 9323-9334-9408-9410-9416-9420- 9423-9430-9432-9444-93220</p> <p><b>077.314.670</b></p> 
<p><b>Ref : 314098</b> Slide plate spring (L) Singer 4623-6234-6235- 6267-6268-9113-9117- 9124-9133-9137-9143- 9217-9224-9240-9900</p> <p><b>077.314.098</b></p> 	<p><b>Ref : 312779</b> Slide plate spring (L) Singer 4613-4623-6234- 6235-6267-6268-9113-9117 -9124-9133-9137-9143- 9217-9224-9240-9900</p> <p><b>077.312.779</b></p> 	<p><b>Ref : 312779 = 314669</b> Slide plate spring (R) Singer 4552-4562-4572-4610-4617 -6233-7033-7035-9005-9008-9010 -9015-9018-9020-9022-9027-9030 -9032-9034-9044-9110-9130-9210 -9323-9334-9408-9410-9416-9420 -9423-9430-9432-9444-93220</p> <p><b>077.312.779</b></p> 
<p><b>Ref : 141848-819</b> Slide plate spring screw Singer 240</p> <p><b>077.141.848</b></p> 	<p><b>Ref : 354921-451</b> Slide plate spring screw Singer 6230-4552-4622- 7028-9005-9008-9010- 9410</p> <p><b>077.354.921</b></p>	<p><b>Ref : 725</b> Slide plate spring screw Singer 15CL</p> <p><b>077.000.725</b></p>
<p><b>Ref : SP22</b> Slide plate spring Brother</p> <p><b>077.000.022</b></p> 	<p><b>Ref : 2824</b> Slide plate spring Singer Dressmaker 15-30, 15-88, 15-90, 15-91, 15CL, 237, 239, S3000</p> <p><b>077.002.824</b></p> 	<p><b>Ref : 851130-02</b> Slide plate spring Necchi Supernova</p> <p><b>077.851.130</b></p> 
<p><b>Ref : 189625</b> Slide plate spring Singer 206-206K-306K- 306W-319</p> <p><b>077.189.625</b></p>	<p><b>Ref : 85183</b> Slide plate spring Singer 1500-2662-2638</p> <p><b>077.085.183</b></p>	<p><b>Ref : 103344</b> Slide plate spring Singer 522-527-533-534-538-543-560- 563-800 series-1022-1482-1485-1486- 1488-1490-1492-2102-2105-2106-2108 -2110-2112-2114-2118-2210-6102- 6104-6105-6106-6110-6120-6130-6136 -6146-6152-6156-6184-6513-6522- 6528-6533-6543-6544-6548-7102-7104 -7105-7106-7110-7136-8100-8200- 8600-8774-9600</p> <p><b>077.103.344</b></p> 
<p><b>Ref : 125337</b> Slide plate spring Singer 15-88, 15-90, 15-91, 293B</p> <p><b>077.400.110</b></p> 	<p><b>Ref : 163478</b> Slide plate spring Singer 600-603-604-620- 625-626-628-629-630-630E -635-635E-636-638-639- 640E-645-646-648-649</p> <p><b>077.163.478</b></p> 	<p><b>Ref : 172016</b> Slide plate spring Singer 401-403-403A-404- 500-503-600-603-604-620- 620E31-625-626-628-629- 630-630E-635-636-638-639- 640E-645-646-648-649</p> <p><b>077.172.016</b></p> 
<p><b>Ref : 172957</b> Slide plate spring Singer 714-719-724-734-737 -750-755-756-758-770-774- 775-776-778-717 School- 6700 series-6800 series</p> <p><b>077.172.957</b></p> 	<p><b>Ref : 179522</b> Slide plate spring Singer 328-329-337-338- 347-348-353-354-413K- 416K-418-457-466-476-477 -478</p> <p><b>077.179.522</b></p> 	<p><b>Ref : 32570</b> Slide plate spring Singer 66-6, 99-13, 185CL, 192</p> <p><b>077.032.570</b></p> 
<p><b>Ref : 37239-830</b> Slide plate spring Singer 1263-1280-1288-2302-2303- 2304-2315-2330-240-2404-250-288 -2302-2303-2304-2315-2330-3101- 3102-3103-3105-360-362-366-367- 4325-6011-6012-6021-7101-7108- 7174-8500-247AP-247-2440-9500</p> <p><b>077.037.239</b></p> 	<p><b>Ref : 408035</b> Slide plate spring Singer 1200-1040G-1411U- 1425U-935U-1060-1411- 290-8002-8007-8019</p> <p><b>077.408.035</b></p> 	<p><b>Ref : 446482</b> Slide plate spring Singer 1802-1803-1812-1852-1853-1862 -1872-1873-2430-2440-2502-2503-2504- 2515-2517-2530-2543-3270-3314-3317- 3343-5050-5605-5610-5705-5710-5802- 5805-5806-5808-5810-5812-5814-5816- 5817-5818-5820-5825-5830-5838-6200- 6201-6202-6217-7025-9836-9936-57817 -57820-57825-CM17-DX14-FM17-FM19- FM22-HD102-HD105-HD110-SM14</p> <p><b>077.446.482</b></p> 
<p><b>Ref : 45357</b> Slide plate spring Singer 201, 201-2, 1200-1</p> <p><b>077.045.357</b></p> 	<p><b>Ref : 210650</b> Slide plate spring Necchi BF</p> <p><b>077.210.650</b></p> 	<p><b>Ref : 81334</b> Slide plate spring Singer 118</p> <p><b>077.081.334</b></p>
<p><b>Ref : Riccar</b> Slide plate spring</p> <p><b>077.400.170</b></p> 	<p><b>Ref : Toyota 2</b> Slide plate spring</p> <p><b>077.400.190</b></p> 	<p><b>Ref : Brother</b> Slide plate spring</p> <p><b>077.400.130</b></p> 