

## POKLOPCI RAZNO - AFDEKKAPPEN - COUVERCLES - COVERS - KAPPE



**Ref : 376682-451**  
Cylinder cover with spring  
Singer 14U444, 14U454

**077.376.682**



**Ref : 376712-001**  
Door looper  
Singer 14U64

**077.376.712**



**Ref : 376823-021**  
Cover looper lower  
Singer 14U234

**077.376.823**



**Ref : 550317-402**  
Looper cover  
Singer 14U

**077.550.317**



**Ref : 4125277-01**  
Top cover  
Husqvarna Design 1,  
Design 2

**078.412.527**



 
**Ref : 412706-002**  
Cylinder cover  
Singer 14U all

**077.412.706**



**Ref : 446450**  
End arm cover  
Singer 5705, 5710

**077.446.450**

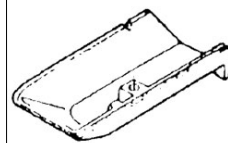

**Ref : 446493-451**  
Bed cover  
Singer 6211-6217

**077.446.493**



**Ref : 6582**  
Top cover  
White 2220, 2221, 2222

**077.006.582**



**Ref : 6734**  
Complete top cover  
White 999

**077.006.734**



**Ref : 753604005**  
Top cover  
Janome 3123

**077.753.604**



**Ref : 827080104**  
Belt cover  
Janome 3500, 5000, 4400

**077.827.080**



**Ref : X55955001**  
Table extension  
Babylock BL9500, ESI, ES12  
Brother PC4000-PC5000-  
PC6500-PC7000-PC7500-  
PC8000-PC8895

**077.055.955**



**Ref : X58648101**  
Main cover  
Brother PE100, PE200  
Babylock EM1, EM2

**077.058.648**



**Ref : X75188-001**  
Front cover  
Brother 730D, 760D

**077.075.188**



 
**Ref : X75892-001**  
Front cover  
Brother 546

**077.075.892**



**Ref : X75893-001**  
Front cover  
Brother 546D

**077.075.893**

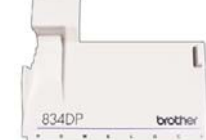

**Ref : X76384-001**  
Front cover  
Brother 834DP

**077.076.384**



 
**Ref : X76455-001**  
Front cover accessory  
Brother PL1600, PL2000

**077.076.455**



**Ref : X76457-001**  
Blade cover  
Brother PL1600, PL2000

**077.076.457**

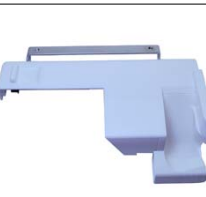

**Ref : X76465-001**  
Front cover accessory  
Brother PL1500

**077.076.465**



**Ref : X77202-001**  
Front cover  
Brother 934D

**077.077.202**



**Ref : X77360-001**  
Front cover  
Brother PL1050

**077.077.360**



**Ref : X77369-001**  
Front cover  
Brother 920D

**077.077.369**



**Ref : X77702-001**  
Front cover  
Brother 925D-935D

**077.077.702**



**Ref : XB0292-001**  
Front cover  
Brother 929D

**077.000.292**



**Ref : XB09797-001**  
Front cover  
Brother 1034D

**077.009.797**



**Ref : H13173211**  
Hook cover  
Elna 3300, 3400

**077.131.732**



**Ref : X75249-002**  
Cover plate control  
Brother 760, 760E,  
760DE

**077.075.249**



**Ref : G5008-567**  
Cover stitch guide  
Singer 14T948DS

**077.500.856**

## POKLOPCI RAZNO - AFDEKKAPPEN - COUVERCLES - COVERS - KAPPE

 <p><b>Ref : 138633101</b> Box accessory (no lip) Brother VX890</p> <p><b>077.138.633</b></p>	 <p><b>Ref : 138643105</b> Table accessory with box and lid Brother VX880</p> <p><b>077.138.643</b></p>	 <p><b>Ref : X55834051</b> Table accessory Brother PS1700 Babylock BL2100, BL6000</p> <p><b>077.055.834</b></p>
 <p><b>Ref : X56562051</b> Table accessory Brother PS1750 Babylock BL2150</p> <p><b>077.056.562</b></p>	 <p><b>Ref : X57850151</b> Table accessory Brother PS1900</p> <p><b>077.057.850</b></p>	 <p><b>Ref : X59872151</b> Table accessory Brother PS1000, PS1950, PS2100 Babylock BL6700</p> <p><b>077.059.872</b></p>
 <p><b>Ref : XA1816001</b> Box accessory Brother PC8200, PC8500</p> <p><b>077.001.816</b></p>	 <p><b>Ref : XA6551001</b> Box accessory Brother PE300S</p> <p><b>077.006.551</b></p>	 <p><b>Ref : XA6551054</b> Box accessory Brother PE400D</p> <p><b>078.006.551</b></p>
 <p><b>Ref : X53071051</b> Base plate Brother PS1700 Babylock BL2100, BL6000</p> <p><b>077.053.071</b></p>	 <p><b>Ref : X55688051</b> Base plate Brother PS1750 Babylock BL2150</p> <p><b>078.055.688</b></p>	 <p><b>Ref : X55938101</b> Face plate Brother PC7000, PC7500, PC8000, 895 Babylock ES1, ES2</p> <p><b>077.055.938</b></p>
<p><b>Ref : X57609051</b> Face plate Brother PC5000, PC6000</p> <p><b>077.057.609</b></p>	 <p><b>Ref : X58653001</b> Face plate Brother PE100, PE200 Babylock EM1, EM2</p> <p><b>077.058.653</b></p>	 <p><b>Ref : X77183-001</b> Base spool stand Brother 925D, 935D</p> <p><b>077.077.183</b></p>
 <p><b>Ref : X77731-001</b> Base spool stand Brother 925D, 935D</p> <p><b>077.077.731</b></p>	 <p><b>Ref : 93-038044-43</b> Face plate Pfaff 2010, 2040</p> <p><b>077.038.044</b></p>	<p><b>Ref : 93-038095-43</b> Top cover Pfaff 2010, 2040</p> <p><b>077.038.095</b></p>
 <p><b>Ref : 137660051</b> Face plate Brother 845 Babylock BL7500, BL8500</p> <p><b>077.137.660</b></p>	 <p><b>Ref : X57554051</b> Power switch cover Brother XL3010-XL3200</p> <p><b>077.575.540</b></p>	
 <p><b>Ref : X59176051</b> Body socket 3P Brother XL3010-PC3000</p> <p><b>077.059.176</b></p>	 <p><b>Ref : X59177051</b> Cover 3P Brother XL3010-XL3200</p> <p><b>077.059.177</b></p>	 <p><b>Ref : 132645001</b> Body socket Brother VX760-VX780</p> <p><b>077.132.645</b></p>
 <p><b>Ref : 138596051</b> Body socket Brother VX series</p> <p><b>077.138.596</b></p>	 <p><b>Ref : 138270002</b> Machine handle Brother 845 Babylock BL7000-BL7500- BL8500</p> <p><b>078.138.270</b></p>	