 


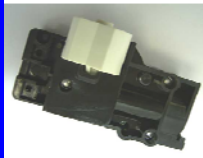







 


 
 
 








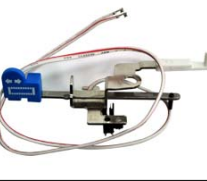

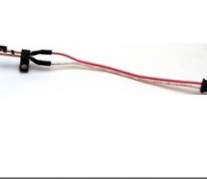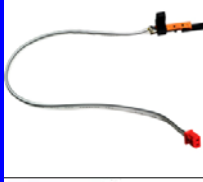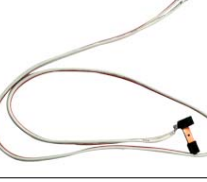

PREKIDA I - SCHAKELAARS - INTERRUPTEURS - SWITCHES - SCHALTER

	<p>Ref : 326.530.03 Light switch Bernina 930</p> <p>077.326.530</p>		<p>Ref : 70-112000-02 Light switch Pfaff 1221-1222 electr.</p> <p>077.112.000</p>		<p>Ref : PFW-193891 Light switch Singer 221</p> <p>078.193.891</p>
	<p>Ref : 70-112000-29 = SW100 Switch on-off for Taiwan/Japanese machines Brother Serger 320-461-761-524N-523N-525N-526-626D-634D-834DP-VX520-VX540-VX560-VX620-VX640-VX660-VX707-VX710-VX760-VX780-XL711-546D-526D-546 Pfaff 1196 Husqvarna Viking Serger S431-S435-S440-S234-535D-S444</p> <p>078.112.000</p>		<p>Ref : 92-329879-91/000 Reverse switch Pfaff 2140-2144-2170</p> <p>077.329.879</p>		
	<p>Ref : 0011485000 Switch Bernina 1130-1230-1530-1630</p> <p>077.001.148</p>		<p>Ref : 618783 Light switch knob Singer 457</p> <p>077.618.783</p>		<p>Ref : 137749-001 Switch buttonholder Brother 845 BBL BL7000-7500-8500</p> <p>077.137.749</p>
	<p>Ref : 002425118 On/Off switch Singer 1732-2250-2259-2263</p> <p>077.002.425</p>		<p>Ref : 4118995-001 Switch Viking 950 Control</p> <p>077.411.899</p>		
	<p>Ref : T 75 C Schakelaar voor mono phase motor <i>Interrupteur pour moteur mono phase</i></p> <p>072.125.001</p>		<p>Ref : X57554051 Cover power switch Brother XL3010-3200 Babylock BL1556</p> <p>077.575.540</p>		<p>Ref : X57651051 Lever buttonhole switch Brother PC7000, PC7500, PC8000, 895, BBL ESI</p> <p>077.576.510</p>
	<p>Ref : X57650001 Plate buttonhole switch Brother PC7000, PC7500</p> <p>077.576.500</p>		<p>Ref : X59178051 On/off switch Babylock BL1556-BL2160-BL6200 Brother XL4010-XL4020-XL4030-XL4050-XL4060-XL4040-PS1000-PS1250-PS1800-XL3010-XL3022-XL3025-XL3027-XL3030-XL3100-XL3200-XR31-XR33-XR34-XR35-XR37-XR40</p> <p>077.591.780</p>		<p>Ref : X56202001 Switch bobbin winder Brother PE100, PE200 Babylock Bernina</p> <p>077.562.020</p>
	<p>Ref : X50831001 Switch bobbin winder Brother VX940-VX98</p> <p>077.508.310</p>		<p>Ref : X57750051 Switch buttonholder change Brother PC7000 Babylock</p> <p>077.577.500</p>		<p>Ref : SW200 Switch on-off Taiwan Viking 100 Brother 925D-335D-929D-1034D</p> <p>078.000.200</p>
	<p>Ref : 284084 = 0400 Switch press Singer MP4, MSP7</p> <p>073.010.560</p>		<p>Ref : X59478001 Switch presser Brother PE100, PE200</p> <p>077.594.780</p>		<p>Ref : 988763-001 Switch Singer 4552, 6012-6017</p> <p>077.988.763</p>
	<p>Ref : 988548 Switch Singer 4600, 6230, 9000</p> <p>077.988.548</p>		<p>Ref : 103513-003 Switch Singer 500-513-514-518-533-534-538-800 series and also Finesse brand machines</p> <p>078.103.513</p>		<p>Ref : 362307-001 Switch Singer 5825-5830-5838-FM17-FM22</p> <p>077.362.307</p>
	<p>Ref : X56068001 Switch Brother PC7000, PC7500, PC8000 Babylock</p> <p>077.560.680</p>		<p>Ref : X57983051 Switch Brother VX1100, VX1200</p> <p>077.579.830</p>		<p>Ref : 130569-001 Switch Brother VX707-VX760</p> <p>077.130.569</p>