

STOPICE CIK-CAK - VOETEN ZIGZAG - PIEDS ZIGZAG - FEET ZIGZAG -ZICKZACK FÜßE

 <p>Ref : 0025767000 Zig-zag foot #1</p> <p>077.002.576</p>	 <p>Ref : 0084457000 Zig zag foot #1N</p> <p>077.008.445</p>	 <p>Ref : 0309727000 Clear zig zag foot #34</p> <p>077.030.972</p>
 <p>Ref : 137748101 Zigzag foot Brother</p> <p>077.137.748</p>	 <p>Ref : 172075 Zigzag foot Schuin/oblique/slant Singer 626E1-626E6- 626E7-631</p> <p>077.272.075</p>	 <p>Ref : 4127640-01 Zigzag foot, 17mm. Husqvarna Designer 1-2</p> <p>077.412.640</p>
 <p>Ref : 5011-4 Zigzag presser foot, snap-on</p> <p>077.100.004</p>	 <p>Ref : 446014-2=543714 Zigzag foot Singer</p> <p>077.543.714</p>	 <p>Ref : 5554 Zigzag foot, high satin plastic</p> <p>077.105.554</p>
 <p>Ref : 5555 Zigzag foot Hoog/haut/high center</p> <p>077.105.555</p>	 <p>Ref : 55612 Zigzag foot satin Laag/bas/low center</p> <p>077.155.612</p>	 <p>Ref : 55614 Zigzag foot Laag/bas/low center</p> <p>077.155.614</p>
 <p>Ref : 55622 Zigzag foot satin Hoog/haut/high center</p> <p>077.155.622</p>	 <p>Ref : 5613KH Zigzag foot, no cut out Hoog/haut/high shank</p> <p>077.005.613</p>	 <p>Ref : 5613=5613 KL Zigzag foot, no cut out Laag/bas/low shank</p> <p>077.105.613</p>
 <p>Ref : 5616 (5616 KL) Zigzag foot plastic satin Laag/bas/low</p> <p>077.105.616</p>	 <p>Ref : 832523007 = 822508005 = 825510021 Zigzag foot Janome 5000-MC9000</p> <p>077.832.523</p>	 <p>Ref : 941270000 = 1195A Zigzag foot Low teflon Laag/bas</p> <p>077.941.270</p>
 <p>Ref : 941280000 Zigzag foot High teflon Hoog/haut</p> <p>077.941.280</p>	 <p>Ref : 941290000 Teflon foot, slant shank Schuin/oblique Singer</p> <p>077.941.290</p>	 <p>Ref : 98-694816-00 Zigzag foot, snap-on, 6mm. Pfaff</p> <p>077.694.816</p>
 <p>Ref : 98-694847-00 Zigzag foot, snap-on, 7mm. Pfaff</p> <p>077.694.847</p>	 <p>Ref : XC1949002 Snap-on teflon foot 7mm. Brother-Singer-Babylock- Elna</p> <p>077.194.902</p>	 <p>Ref : XC3021051 Zigzag foot Brother Babylock</p> <p>077.302.105</p>
 <p>Ref : XC4901051 Zigzag foot Brother XL2600-XL2610- XL2620-XL3500-XL3510- XL3520</p> <p>077.490.105</p>	 <p>Ref : 425754 Zigzag foot Elna</p> <p>077.425.754</p>	 <p>Ref : 494390 Zigzag foot, B foot, 7mm. Elna 8000-9000-Diva</p> <p>077.494.390</p>
 <p>Ref : T030057 Zigzag foot Elna 300-1500-1600</p> <p>077.030.057</p>	 <p>Ref : 35231 Zigzag foot, front loading Kenmore</p> <p>077.035.231</p>	 <p>Ref : 650504002 Zigzag foot Kenmore 385 series</p> <p>077.650.504</p>

STOPICE CIK-CAK - VOETEN ZIGZAG - PIEDS ZIGZAG - FEET ZIGZAG - ZICKZACK FÜßE

 <p>Ref : 93-037905-91 Zigzag foot, snap-on, 9mm. Pfaff 301 077.037.905</p>	 <p>Ref : R3 Zigzag foot, snap-on Riccar 077.200.003</p>	 <p>Ref : 006806008 Zigzag foot Singer 1105-1107-1116- 1120-1130-1525 077.680.608</p>
 <p>Ref : 313150 = 163710 = 502280 Zigzag foot wide Schuin/oblique/slant Singer 4552-4572-4622-7028- 7037-9005-9008-9010-9410 077.313.150</p>	 <p>Ref : 386004 Zigzag foot Singer Quantum XL100- XL1000-XL150-XL5000 077.386.004</p>	 <p>Ref : 446014-2 Zigzag foot Laag/bas/low Singer 077.446.016</p>
 <p>Ref : 446371 Zigzag foot, snap-on, wide Laag/bas/low Singer 077.446.371</p>	 <p>Ref : 730167 Zigzag foot Singer 117 077.730.167</p>	 <p>Ref : 76251 Zigzag foot Singer 2638-2662-7422- 7424-7426-7442-7444- 7446-7462-7464-7466- 7468 077.076.251</p>
 <p>Ref : 77045 Zigzag foot Singer 132Q-140Q 077.077.045</p>	 <p>Ref : HP32969 Zigzag foot Singer 9410-9420-9440 077.032.969</p>	 <p>Ref : 446014-2=543714 Zigzag foot Singer 077.446.016</p>
 <p>Ref : 4120373 Zigzag foot Husqvarna S105 077.412.037</p>	 <p>Ref : 4127952-45 = 4123465-45 Zigzag foot (S) Husqvarna 1200, 1250, #1+, #1 077.712.795</p>	 <p>Ref : 541566 Zigzag foot 12mm. High shank Singer 20U 085.541.566</p>
 <p>Ref : 006918008 Zigzag foot Singer 3820-6510-6550- 7312-7322-7350-7358- 7360 077.691.808</p>	 <p>Ref : 283104 Zigzag foot Singer DSX-Quantum CXL- Quantum LE-Quantum XL1 -Quantum XL50 077.283.104</p>	 <p>Ref : 685502008 Zigzag foot, type A Janome - Also called the all- purpose foot. Used for most utility sewing from straight stitch to zigzag stitching. 077.685.502</p>
 <p>Ref : 79495 Zigzag foot Singer 118 077.079.495</p>	 <p>Ref : X51953001 Zigzag foot Babylock BL6200-BL2100- BL6000-BL2150-BL6700 Brother PE300S-PE400D- PS1000-PS1250-PS1700- PS1750-PS1800-PS1900- PS1950-PS2100 077.519.530</p>	 <p>Ref : 98-694828-00 = 820773-096 Zigzag foot with IDT mini walking foot Pfaff 1006-7570 077.694.828</p>
 <p>Ref : 43522 A Zigzag foot hinged Extra hoog/extra haut/ extra high guard Pfaff 138-238 071.360.340</p>	 <p>Ref : 395710-03 = 301612003 Zigzag presser foot Babylock BL9-BL16-BL18A- BL22 Elna 1000 (Sew Fun) - 2300 Kenmore 385.15358600 077.395.712</p>	 <p>Ref : 5554 KH 077.105.558</p>
 <p>Ref : 172075 = 409379 = 384129 Singer 077.272.075</p>	 <p>Ref : 175075 P 077.272.076</p>	 <p>Ref : 5645 Buttonhole foot, high shank, plastic 077.105.645</p>
 <p>Ref : 55701 Buttonhole foot, low shank, plastic 077.155.701</p>	 <p>Ref : 55649 Open toe foot, low shank 077.155.649</p>	