

























STOPICE ZA IZRADU RUPICA - KNOOPSGAT- EN KNOOPAANZETVOETEN - PIEDS BOUTONNIERE/POSE BOUTON BUTTONHOLE FEET - KNOPFLOCHFÜßE

| | | |
|---|---|--|
|  <p>Ref : 0012507000 Buttonhole foot Bernina auto</p> <p>077.125.070</p> |  <p>Ref : 006171008 Buttonhole foot Singer 3116 Simple, 3810, 3820, 3822, 7350</p> <p>077.061.718</p> |  <p>Ref : 006174008 Buttonhole foot Singer 6510, 7312, 7322, 7350, 7380</p> <p>077.061.748</p> |
|  <p>Ref : 006909008 Buttonhole foot Singer 1105-1116-1120- 1130-1525-2250-2259- 2263-8280</p> <p>077.069.908</p> |  <p>Ref : 11306 Buttonhole foot open toe, high shank Babylock BLQP - Brother PQ1300, PQ1500, PQ1500S - Janome 1600P, 1600P-DB, 1600P-DBX, MC6600 Juki TL-98E, TL-98Q, TL-98QE, TL-98P Pfaff 1200 Grand Quilter, 1197, 1211, 1212, 1213, 1214, 1216, 1217, 1222, 1222E, 1229 - Husqvarna Mega Quilter</p> <p>077.011.306</p> |  <p>Ref : 161927 Buttonhole foot Singer 241, 247, 263, 288, 547, 563, 588, 2001, 2302, 2303, 2304, 2315, 2330, 2404, 2440, 2502, 2503, 2504, 2515, 2530, 3101, 3102, 3103, 3105, 3314, 3317, 3343, 4530, 5705, 5812, 5814, 5816, 5818, 5825, 5830, 5838, 9134, 57825, CM17, FM22</p> <p>077.161.927</p> |
|  <p>Ref : 11311 Buttonhole foot open toe, slant shank Singer 266, 290, 301, 401, 411, 431, 500, 501, 502, 503, 503A, 600, 603, 604, 610, 625, 626, 628, 629, 630, 631, 635, 635E3, 635E6, 635E7, 636, 638, 639, 640, 645, 646, 649, 700, 706, 708, 714, 717, 719, 720, 721, 724, 725, 729, 734, 737, 740, 746, 750, 755, 756, 758, 760, 766, 770, 774, 775, 776, 778, 784, 786, 900-3, 920-3, 1000, 1036, 1050, 1100, 1410, 1411, 1425, 2000, 2000A, 2001, 2010, 4552, 4610, 4622, 5910 6233, 6234, 6235, 6267, 6268, 6740, 6800, 6900, 7028, 7033, 8019, 9005, 9008, 9010, 9012, 9015, 9018, 9020, 9022, 9027, 9032, 9123, 9133, 9135, 9137, 9143, 9210, 9217, 9224, 9240, 9400, 9408, 9410, 9416, 9417, 9420, 9423, 9430, 9432, 9440, 9444</p> <p>077.011.311</p> |  <p>Ref : 1932H Buttonhole foot, high shank Babylock BLQP - Brother PQ1300, PQ1500, PQ1500S - Janome 1600P, 1600P-DB, 1600P-DBX, MC6600 Juki TL-98E, TL-98Q, TL-98QE, TL- 98P - Pfaff 1200 Grand Quilter, 1197, 1211, 1212, 1213, 1214, 1216, 1217, 1222, 1222E, 1229 - Husqvarna Mega Quilter</p> <p>078.001.932</p> | |
|  <p>Ref : 1932L Buttonhole foot, low shank</p> <p>077.001.932</p> |  <p>Ref : 1932S Buttonhole foot, slant shank 266, 290, 301, 401, 411, 431, 500, 501, 502, 503, 503A, 600, 603, 604, 610, 625, 626, 628, 629, 630, 631, 635, 635E3, 635E6, 635E7, 636, 638, 639, 640, 645, 646, 649, 700, 706, 708, 714, 717, 719, 720, 721, 724, 725, 729, 734, 737, 740, 746, 750, 755, 756, 758, 760, 766, 770, 774, 775, 776, 778, 784, 786, 900-3, 920-3, 1000, 1036, 1050, 1100, 1410, 1411, 1425, 2000, 2000A, 2001, 2010, 4552, 4610, 4622, 5910 6233, 6234, 6235, 6267, 6268, 6740, 6800, 6900, 7028, 7033, 7043, 8019, 9005, 9008, 9010, 9012, 9015, 9018, 9020, 9022, 9027, 9032, 9123, 9133, 9135, 9137, 9143, 9210, 9217, 9224, 9240, 9400, 9408, 9410, 9416, 9417, 9420, 9423, 9430, 9432, 9440, 9444, 30920</p> <p>079.001.932</p> | |
|  <p>Ref : 283396 Buttonhole foot Singer Quantum CXL, Quantum LE, Quantum XL1</p> <p>077.283.396</p> |  <p>Ref : 313992-451 = 313999-451 = 137920-451 Buttonhole foot Singer 266, 290, 301, 401, 411, 431, 500, 501, 502, 503, 503A, 600, 603, 604, 610, 625, 626, 628, 629, 630, 631, 635, 635E3, 635E6, 635E7, 636, 638, 639, 640, 645, 646, 649, 700, 706, 708, 714, 717, 719, 720, 721, 724, 725, 729, 734, 737, 740, 746, 750, 755, 756, 758, 760, 766, 770, 774, 775, 776, 778, 784, 786, 900-3, 920-3, 1000, 1036, 1050, 1100, 1410, 1411, 1425, 2000, 2000A, 2001, 2010, 4552, 4610, 4622, 5910 6233, 6234, 6235, 6267, 6268, 6740, 6800, 6900, 7028, 7033, 7043, 8019, 9005, 9008, 9010, 9012, 9015, 9018, 9020, 9022, 9027, 9032, 9123, 9133, 9135, 9137, 9143, 9210, 9217, 9224, 9240, 9400, 9408, 9410, 9416, 9417, 9420, 9423, 9430, 9432, 9440, 9444</p> <p>077.313.992</p> | |
|  <p>Ref : 321424 Buttonhole foot Singer 117</p> <p>077.321.424</p> |  <p>Ref : 381277 Buttonhole foot, snap-on Singer 900-3, 920-3, 6233 -6234-6235-6200-9000- 4600-4622AN503-93234</p> <p>077.381.277</p> | |
|  <p>Ref : 386012 Buttonhole foot Singer Quantum XL100</p> <p>077.386.012</p> |  <p>Ref : 4017 Sew-on button foot, low shank</p> <p>077.004.017</p> | |
|  <p>Ref : 4127853-45 Buttonhole foot Husqvarna</p> <p>077.412.853</p> |  <p>Ref : 4128151-01 Buttonhole foot sensor Husqvarna</p> <p>077.412.815</p> |  <p>Ref : 4129345-45 Buttonhole foot with repair tool Husqvarna</p> <p>077.412.934</p> |
|  <p>Ref : 4111732-01 = 4131056-01 Button clearance plate Husqvarna</p> <p>077.411.173</p> |  <p>Ref : 423200-451 Buttonhole foot Singer 2210</p> <p>077.423.200</p> |  <p>Ref : PD5011-17 = 5011-17 Buttonhole foot, snap-on</p> <p>077.501.123</p> |
|  <p>Ref : PD5011-5 = 76257 Sew-on button foot, snap-on</p> <p>077.501.108</p> |  <p>Ref : 5011-8=PD5011-8 Plastic buttonhole foot, snap-on Babylock B15 Brother BM2600, BM3500, L25, L35, LS2125, PX100, RS15, VX1435, XL2120, XL2121, XL2130, XL2140, XL2150, XL2220, XL2230, XL2240, XL2250, XL2600, XL2610, XL2620, XL3500, XL3500T, XL3510, XL3520, XL3800, XL5010, XL5011, XL5012, XL5050, 5100, XL5130</p> <p>077.100.008</p> | |

STOPICE ZA IZRADU RUPICA - KNOOPSGAT- EN KNOOPAANZETVOETEN - PIEDS BOUTONNIERE/POSE BOUTON BUTTONHOLE FEET - KNOPFLOCHFÜßE

| | | |
|--|---|--|
|  <p>Ref : PD5011-8M Buttonhole foot metal, snap-on</p> <p>077.501.112</p> |  <p>Ref : 506377 Buttonhole foot, slant shank Singer 266, 290, 301, 401, 411, 431, 500, 501, 502, 503, 503A, 600, 603, 604, 610, 625, 626, 628, 629, 630, 631, 635, 635E3, 635E6, 635E7, 636, 638, 639, 640, 645, 646, 649, 700, 706, 708, 714, 717, 719, 720, 721, 724, 725, 729, 734, 737, 740, 746, 750, 755, 756, 758, 760, 766, 770, 774, 775, 776, 778, 784, 786, 900-3, 920-3, 1000, 1036, 1050, 1100, 1410, 1411, 1425, 2000, 2000A, 2001, 2010, 4552, 4610, 4622, 5910 6233, 6234, 6235, 6267, 6268, 6740, 6800, 6900, 7028, 7033, 8019, 9005, 9008, 9010, 9012, 9015, 9018, 9020, 9022, 9027, 9032, 9123, 9133, 9135, 9137, 9143, 9210, 9217, 9224, 9240, 9323, 9400, 9408, 9410, 9416, 9417, 9420, 9423, 9430, 9432, 9440, 9444, 30920</p> <p>077.506.377</p> | |
|  <p>Ref : 5558 Buttonhole foot with gauge, high shank Babylock BLQP Brother PQ1300, PQ1500, PQ1500S Janome 1600P, 1600P-DB, 1600P-DBX, MC6600 Juki DDL-8700, TL98Q, TL98QE, TL98E Pfaff 1200 Grand Quilter Singer 20U Series, 31-15 Husqvarna Mega Quilter</p> <p>077.005.558</p> |  <p>Ref : 55649 Open toe foot, low shank</p> <p>077.155.649</p> |  <p>Ref : 55701 Buttonhole foot, low plastic</p> <p>077.155.701</p> |
|  <p>Ref : 5645 Buttonhole foot, high plastic</p> <p>077.105.645</p> |  <p>Ref : 6016 Sew-on button foot, high shank Babylock BLQP Brother PQ1300, PQ1500, PQ1500S Janome 1600P, 1600P-DB, 1600P-DBX, MC6600 Juki TL98Q, TL98QE, TL98E, TL98P Pfaff 1200 Grand Quilter Husqvarna Mega Quilter</p> <p>077.106.016</p> |  <p>Ref : 76360 Buttonhole foot Singer 2638, 2639, 2662</p> <p>077.076.360</p> |
|  <p>Ref : 753801004 = 830823015 Buttonhole foot Janome 525S, 625E, 20403023, 3123, 4045LX, 4045NX, 4119 Quilter's Delight, 4618LE, 4623LE, 5024, 6019QC, 6125QC, 6260QC, 7061NX, 7330 Magnolia, 8048, DC3018, DC3050, DE5018, DE5024, DE5124, DS3050, HF3000, HF3022, HF4045LX, HF5024, HF8077, HF8100, HT2008, MC2400, MC3000, MC3500, MC4000, MC4018, MC4023, MC4400, MC4800, MC4800QC, MC4900, MC5000, MC5700, MC6500P, MC6600, MC6600P, MC8000, MC9000, MC9500, MC9700, MC10000, MC10001, MC11000, ME4018, ME4123, ML3023, MX3123, JP720, JP760, Sew Precise Kenmore 385.162213, 385.19000 Necchi 6150</p> <p>077.753.801</p> |  <p>Ref : 77047 Sliding buttonhole foot Juki HZL-25Z Singer 132Q, 140Q</p> <p>077.077.047</p> | |
|  <p>Ref : 802406000 Sew-on button foot Janome Jem Gold 660, MC3000, Schoolmate S-3015, MC3500, Décor Excel 5018, Décor Excel Pro 5124, MC5700, MC6500, MC9000, DC3018, MC6600, MC4800QC, MC10001, MC11000, MC4900QC, 4618, 4623, 6019QC, 6125QC, 6260QC, 7121, Classmate S-750, DC3050, Jem Gold 2, Jem Platinum 720/760</p> <p>077.802.406</p> |  <p>Ref : 820822013 = 825813016 Buttonhole foot Babylock BL20A (Anna) Janome 661 (Jem Gold), 2014</p> <p>077.820.822</p> |  <p>Ref : 825822007 Buttonhole foot 4-step Janome 521, 4618, 4623, 6019QC, 6125QC, 6260QC, DC3018, DC3050, Décor Excel 5018, Décor Excel Pro 5124, MC3000, MC3500, MC4800QC, MC4900QC, MC5700, MC6500, MC6600, MC7000, MC7500, MC9000</p> <p>077.825.822</p> |
|  <p>Ref : 828H-N Buttonhole foot, high sliding plastic</p> <p>077.000.829</p> |  <p>Ref : 828L-N Buttonhole foot, low Kenmore 158.13200, 158.13201</p> <p>077.000.828</p> |  <p>Ref : 828MH-N Buttonhole foot, slide high metal</p> <p>077.000.826</p> |
|  <p>Ref : 828MS-N Buttonhole foot, slant shank Singer 266, 290, 301, 401, 411, 431, 500, 501, 502, 503, 503A, 600, 603, 604, 610, 625, 626, 628, 629, 630, 631, 635, 635E3, 635E6, 635E7, 636, 638, 639, 640, 645, 646, 649, 700, 706, 708, 714, 717, 719, 720, 721, 724, 725, 729, 734, 737, 740, 746, 750, 755, 756, 758, 760, 766, 770, 774, 775, 776, 778, 784, 786, 900-3, 920-3, 1000, 1036, 1050, 1100, 1410, 1411, 1425, 2000, 2000A, 2001, 2010, 4552, 4610, 4622, 5910 6233, 6234, 6235, 6267, 6268, 6740, 6800, 6900, 7028, 7033, 8019, 9005, 9008, 9010, 9012, 9015, 9018, 9020, 9022, 9027, 9032, 9123, 9133, 9135, 9137, 9143, 9210, 9217, 9224, 9240, 9400, 9408, 9410, 9416, 9417, 9420, 9423, 9430, 9432, 9440, 9444</p> <p>077.000.824</p> |  <p>Ref : 98-694882-00 Buttonhole foot Pfaff 1006, 1471, 7570 All Pfaff models 1006-7570</p> <p>077.694.882</p> | |
|  <p>Ref : HP31093 Buttonhole foot Singer Quantum XL3400</p> <p>077.031.093</p> |  <p>Ref : HP32948 Buttonhole foot Singer 9410, 9420, 9440</p> <p>077.032.948</p> |  <p>Ref : X53840301 Buttonhole foot Brother B8200</p> <p>077.538.403</p> |
|  <p>Ref : X57789001 Buttonhole foot, snap on Babylock BL7500-BL8000-BL8500-BL9500-ESI-ESI2-ESE-ESE2-ESG Ellageo Brother 845-PC5000-PC6500-PC7000-PC7500-PC8000-PE300S-PE400D-PC8200-PC8500-PC8895-ULT2001-ULT2002</p> <p>077.057.789</p> |  <p>Ref : X59369251 Buttonhole foot 4 step Babylock B15 Brother 5010-5011-5012-5050-5130-RS15-PX100</p> <p>077.059.369</p> |  <p>Ref : 128215-001 = XA4973151, XA4911151 Buttonhole foot Babylock BL37, BL713, BL722, BL1556, BL2150, BL2160, BL6150 Brother PS-3700, PX200, XL3010, XL3022, XL3099, XL5020, XL5021, XL5022, XL5030, XL5031, XL5060, XL5070, XL5232, XL5300, XL5600, XL5700, XL6562, XR35 Riccar R1950, R2050</p> <p>077.128.215</p> |
|  <p>Ref : XC2691051 Buttonhole foot Babylock BL40, BL40A (Grace), BL137A2 (Sofia 2), BL200A (Elizabeth), INT, BLCC (Crafter's Choice), BLCC2 (Crafter's Choice), BLDC, BLDC2 (Decorator's Choice), BLMY (Melody), BLQC, BLTP (Tempo) Brother CE-4000, CE5000PRW, CE-5500PRW, CP-6500, CP-7500, CS-100t, CE-4000, CS-6000, CS-6000t, CS-6000i, CS8060, CS8072, CS8100, CS8150, CS8200, EX-660, HE-240, HS-1000, NV900D, NX200, NX400, NX450, NX600, SE-270D, SE-350, SQ-9000, XR-4040, XR-6600, XR-7700</p> <p>077.269.151</p> |  <p>Ref : 395525-35 Buttonhole foot Elna 8000</p> <p>077.395.524</p> | |

STOPICE ZA IZRADU RUPICA - KNOOPSGAT- EN KNOOPAANZETVOETEN - PIEDS BOUTONNIERE/POSE BOUTON BUTTONHOLE FEET - KNOPFLOCHFÜßE




Ref : 161168 = 381066 Sew on button foot, slant shank
Singer 266, 290, 301, 401, 411, 431, 500, 501, 502, 503, 503A, 600, 603, 604, 610, 625, 626, 628, 629, 630, 631, 635, 635E3, 635E6, 635E7, 636, 638, 639, 640, 645, 646, 649, 700, 706, 708, 714, 717, 719, 720, 721, 724, 725, 729, 734, 737, 740, 746, 750, 755, 756, 758, 760, 766, 770, 774, 775, 776, 778, 784, 786, 900-3, 920-3, 1000, 1036, 1050, 1100, 1410, 1411, 1425, 2000, 2000A, 2001, 2010, 4552, 4610, 4622, 5910 6233, 6234, 6235, 6267, 6268, 6740, 6800, 6900, 7028, 7033, 8019, 9005, 9008, 9010, 9012, 9015, 9018, 9020, 9022, 9027, 9032, 9123, 9133, 9135, 9137, 9143, 9210, 9217, 9224, 9240, 9400, 9408, 9410, 9416, 9417, 9420, 9423, 9430, 9432, 9440, 9444
077.161.168



Ref : 1929 H
Buttonhole foot
Hoog/haut/high
Self-sizing with gauge on side
077.001.930



Ref : 1929S Buttonhole foot, slant shank
Singer 266, 290, 301, 401, 411, 431, 500, 501, 502, 503, 503A, 600, 603, 604, 610, 625, 626, 628, 629, 630, 631, 635, 635E3, 635E6, 635E7, 636, 638, 639, 640, 645, 646, 649, 700, 706, 708, 714, 717, 719, 720, 721, 724, 725, 729, 734, 737, 740, 746, 750, 755, 756, 758, 760, 766, 770, 774, 775, 776, 778, 784, 786, 900-3, 920-3, 1000, 1036, 1050, 1100, 1410, 1411, 1425, 2000, 2000A, 2001, 2010, 4552, 4610, 4622, 5910 6233, 6234, 6235, 6267, 6268, 6740, 6800, 6900, 7028, 7033, 8019, 9005, 9008, 9010, 9012, 9015, 9018, 9020, 9022, 9027, 9032, 9123, 9133, 9135, 9137, 9143, 9210, 9217, 9224, 9240, 9400, 9408, 9410, 9416, 9417, 9420, 9423, 9430, 9432, 9440, 9444
077.001.931

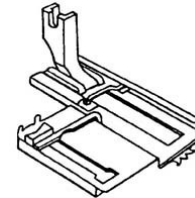

Ref : 1929 L
Buttonhole foot
Laag/bas/low
Self-sizing with gauge on side
077.001.929



Ref : 828ML-N
Buttonhole foot, low shank
077.000.825



Ref : 130489001 Buttonhole foot
Babylock BL40, BL40A (Grace), BL200A (Elizabeth), BL7000, BL7500, BL8000, BL8500, BL9500, BLCC (Crafter's Choice), BLCC2 (Crafter's Choice), BLDC, BLDC2 (Decorator's Choice), BLG, BLMY (Melody), BLQC, BLR2, BLTP (Tempo), ESE, ESE2, ESG, ESL, ESN (Encore), ESP (Espire), INT
Brother 845, CE5000PRW, CS6000, CS8060, CS8100, CS8150, CS8200, NV4000D, NX200, NX400, NX600, PC5000, PC6500, PE8200, PE8500, ULT2001, ULT2002, ULT2003D
077.130.489



Ref : 395710-17
Buttonhole foot 4-step
Elna 1010-2002-2004-2006
077.395.711



Ref : 494500-20
Buttonhole foot
Elna 8000-9000-Diva
077.494.500



Ref : 494420
Buttonhole foot
Elna all models
077.494.420



Ref : 76620
Buttonhole foot one-step
Singer 7422-7424-7426-7442-7444-7446-7462-7464-7466-7468
077.076.620



Ref : 86932
Buttonhole foot one-step
Singer CE100-CE200
077.086.932



Ref : 385097
Buttonhole foot one-step
Singer DSX-Quantum LE/SX/SX-100
077.385.097



Ref : 76322
Buttonhole foot
Singer 117-118-2638-2639-2662
077.076.322



Ref : 820801005
Buttonhole foot
Elna 3210, 3230
Janome 3015, 6000
077.820.801



Ref : R11
Snap-on sliding buttonhole foot
Riccar
077.200.011



Ref : 141000558
Buttonhole foot
White 1999
077.141.558



Ref : 388031
Buttonhole foot
Singer Quantum XL5000, XL6000
077.388.031



Ref : HP12928
Buttonhole foot
Singer 9910-9920-9940
077.012.928