

SCHROEVEN VOOR NAALDKLEMMEN - VIS POUR PINCE AIGUILLES - SCREWS FOR NEEDLE CLAMP - SCHRAUBE

 <p>Ref : 012400432 For needle clamp Brother VX1120, VX1125, V1140 077.012.400</p>	 <p>Ref : 062020416 For needle clamp Brother PE100, Babylock EM1 077.062.020</p>	 <p>Ref : 062300406 For needle clamp Brother PL1500, PL1600, PL2000 077.062.300</p>	 <p>Ref : 062630612 For needle clamp thread guide Brother PQ1300, PQ1500 077.062.630</p>
 <p>Ref : 113413-451 Singer 6210 077.113.413</p>	 <p>Ref : 140751-853 Singer 600 077.140.751</p>	 <p>Ref : 283066 Set 283060, 385029, 386106 077.283.066</p>	 <p>Ref : 354898-451 Singer 6233, 6234, 6235 077.354.898</p>
 <p>Ref : 374102 Singer 14U34, 14U44, 14U64 077.374.102</p>	 <p>Ref : 374103 For needle clamp thread guide Singer 14U64 077.374.103</p>	 <p>Ref : 374352 For needle clamp bracket Singer 14U554, 14U555, 14U557 077.374.352</p>	 <p>Ref : 374353 Singer 14U557 077.374.353</p>
 <p>Ref : 4115904-01 Husqvarna 6000-6690 077.411.590</p>	 <p>Ref : 45285S Singer 500 SRS 078.045.285</p>	 <p>Ref : 624186003 Janome Combi-10, combi-DX, 203, 303 077.624.186</p>	 <p>Ref : 7285218-05 Set 4117502-01 Husqvarna 077.728.521</p>
 <p>Ref : 785008013 Janome 234, 334 077.785.008</p>	 <p>Ref : 785026017 Janome 204, 234D, 334D 077.785.026</p>	 <p>Ref : 802108009 For needle clamp mounting Janome 2000-9000 077.802.108</p>	 <p>Ref : 8058 Singer 2638 077.008.058</p>
 <p>Ref : 91-001129-25 Pfaff 1222 077.001.129</p>	 <p>Ref : X53053001 For needle clamp thread guide Brother PC5000, PC6000, 895 Babylock ES1, ES2 077.053.053</p>	 <p>Ref : X58771051 Brother PE100 Babylock EM1 077.058.771</p>	 <p>Ref : X75246-001 Brother 925D, 935D 077.075.246</p>
 <p>Ref : VA0644051 Brother VX1120, VX1125, VX1140 077.644.051</p>	 <p>Ref : XA4052001 Brother PE200 Babylock EM2 077.004.052</p>	 <p>Ref : XC4266021 Brother CS8100, CS8200 077.004.266</p>	

SCHROEVEN - VIS - SCREWS - SCHRAUBE

	Ref : 000105501 Janome 7000 077.105.501		Ref : 000111201 Janome 077.000.111		Ref : 004240851 Singer 077.424.085		Ref : 008020306 Brother BL2001 Babylock ESG 077.008.020
	Ref : 008020316 Brother PE8200 Babylock ESE 078.008.020		Ref : 009681204 Brother VX SRS 077.009.681		Ref : 060260316 Brother PC7000, PC7500 077.060.260		Ref : 060300806 Brother 929D 077.603.008
	Ref : 060400806 Brother 1034D 077.604.008		Ref : 060670812 Brother PC7000, PC7500 077.606.708		Ref : 061400805 Brother PL1050, 640D 077.614.008		Ref : 062301605 Brother VX SRS 077.062.301
	Ref : 100043053 Brother XL2010, XL2015, XL2021, XL2025, XL2030, XR23, XR29 077.043.053		Ref : 113430-451 Singer 1902, 1872, F/position 077.113.430		Ref : 113439-451 Singer 313089, 137310-001 077.113.439		Ref : 113513-451 077.113.513
	Ref : 113531-451 Singer 077.113.531		Ref : 1172 Singer 66, 99, 300, 400 077.001.172		Ref : 1173 Singer 66, 99, 300, 400 Fits same as 1172 077.001.173		Ref : 1253 Singer 15 077.001.253
	Ref : 1258-451 Screw for 155819 gear 077.001.258		Ref : 126851001 Screw foot Brother serger 925D 077.126.851		Ref : 131139051 Screw for 184989051 gear 077.131.139		Ref : 131226001 Babylock BL, ES Brother PC5000, 6000, 077.131.226
	Ref : 1380 For bobbin case 105032, 173058, 52237 Singer 206, 306, 95, 96 074.300.320		Ref : 139975-452 Tension segment for 421326 077.139.975		Ref : 140440 Singer 077.140.440		Ref : 140694 Singer 221 old style Hook gib 077.140.694
	Ref : 140694NS Singer 221 new style Hook gib 078.140.694		Ref : 140751-900 Singer 2010, 500, 600, 700, 800, 900 New for 55642S 078.140.751		Ref : 141338-896 = 141338.001 Singer 600 series 087.141.338		Ref : 141345-819 Singer 221 new style Hook gib 077.141.345
	Ref : 141771-809 Leg screw Singer 630, 640 077.141.771		Ref : 141848-819 Spring screw Singer 240 077.141.848		Ref : 141882-805 Leg screw Singer 750 077.141.882		Ref : 141949-873 Cover screw Singer 417, 714 077.141.949
	Ref : 175 Feed fork connection 077.000.175		Ref : 190 Screw presser foot 074.300.130		Ref : 192797-S Screw for 192797 078.192.797		Ref : 197 Screw bobbin case finger for 163058 077.000.197




SCHROEVEN - VIS - SCREWS - SCHRAUBE

	<p>Ref : 200473 Screw face plate for 240104</p> <p>077.200.473</p>		<p>Ref : 200592 Screw tension spring mounting for 45751 Singer 221, 301</p> <p>085.200.592</p>		<p>Ref : 200964 Singer 221, 301 for 45751 Bobbin case latch</p> <p>077.200.964</p>		<p>Ref : 201016 Singer 221, 301 for 45751 Tension adj. (grooved)</p> <p>077.201.016</p>
	<p>Ref : 202.035.13 Screw handwheel Bernina 910</p> <p>077.202.035</p>		<p>Ref : 231S Screw shuttle carrier Singer 27</p> <p>077.000.231</p>		<p>Ref : 233 Screw thread guide Singer 15CL</p> <p>077.000.233</p>		<p>Ref : 248 Screw stop motion Singer 15 class</p> <p>077.000.248</p>
	<p>Ref : 249 Screw ndl bar, thread guide Singer 15 class</p> <p>077.000.249</p>		<p>Ref : 286SA Screw thumb medium, 7mm</p> <p>077.300.180</p>		<p>Ref : 314627-451 Screw thumb Singer 6233, 6234, 6235</p> <p>077.314.627</p>		<p>Ref : 354136-452 Screw bobbin cash finger for 153022</p> <p>077.354.136</p>
	<p>Ref : 354183-452 Screw tension adj. For 421326</p> <p>077.354.183</p>		<p>Ref : 354227-451 Screw pos. Bracket Singer 500, 800</p> <p>077.354.227</p>		<p>Ref : 354229-451 Screw pos. Bracket for 44873-451 Singer 500,800</p> <p>077.354.229</p>		<p>Ref : 354898-451 Screw att. for 55642S-NS Singer 4600,</p> <p>077.354.898</p>
	<p>Ref : 354973-451 Screw thread pull off insert Singer 4613, 4617, 4623, ...</p> <p>077.354.973</p>		<p>Ref : 356755-451 Screw stop motion Singer 2502-2530, 3314, 3317</p> <p>077.356.755</p>		<p>Ref : 364063-451 Screw cover Singer 5605, 5610</p> <p>077.364.063</p>		<p>Ref : 374105 Screw edge guide Singer 14U</p> <p>077.374.105</p>
	<p>Ref : 382337S Screw for 382337 cushion</p> <p>078.382.337</p>		<p>Ref : 382904S Screw loading cam Singer</p> <p>078.382.904</p>		<p>Ref : 387126 Singer quantum embroidery frame</p> <p>077.387.126</p>		<p>Ref : 4117560-01 Husqvarna</p> <p>077.411.756</p>
	<p>Ref : 4117840-01 Screw tension spring mounting For 4011530 and 4120972 (N.S.)</p> <p>077.411.784</p>		<p>Ref : 4119621-02 Screw tension spring mounting For 4011530 and 4120972 (O.S.)</p> <p>077.411.962</p>		<p>Ref : 4119650-02 Screw tension adj. Husqvarna For 4011530, 4120972 (O.S.)</p> <p>077.411.965</p>		<p>Ref : 4119668-02 Screw bobbin case stop Husqvarna</p> <p>077.411.966</p>
	<p>Ref : 412005-901 Screw att. Husqvarna 900</p> <p>078.412.005</p>		<p>Ref : 412006-901 Screw att. Husqvarna 2000, 6000</p> <p>078.412.006</p>		<p>Ref : 4124097-01 Screw for presser bar Husqvarna</p> <p>077.412.409</p>		<p>Ref : 4125825-01 Screw set for 4117502-02 Husqvarna</p> <p>077.412.582</p>
	<p>Ref : 450600 Elna</p> <p>077.450.600</p>		<p>Ref : 467790-10 Elna Adjustable feeder</p> <p>077.467.790</p>		<p>Ref : 504063-451 Singer 14SH644 Screw foot</p> <p>077.504.063</p>		<p>Ref : 544115 Singer 1411, 1425 Screw position finger</p> <p>077.544.115</p>
	<p>Ref : 544256 Singer 14U Screw lower knife 412749</p> <p>077.544.256</p>		<p>Ref : 544262-101 Singer 14U34 Screw presser foot</p> <p>077.544.262</p>		<p>Ref : 544407 Singer 14U for upper knife 412585</p> <p>077.544.407</p>		<p>Ref : 591 Screw tension adj for bobbin case</p> <p>074.300.250</p>

SCHROEVEN - VIS - SCREWS - SCHRAUBEN

 <p>Ref : 592 Screw latch for bobbin case 074.300.260</p>	 <p>Ref : 6613 Screw set white 2220, 2221, 2222 077.006.613</p>	 <p>Ref : 665 Screw needle bar guide Singer 15 class 077.000.665</p>	 <p>Ref : 7430 Screw bobbin winder White 1899 077.007.430</p>
 <p>Ref : 7231219-01 Screw presser foot Husqvarna S500 077.723.121</p>	 <p>Ref : 93-037369-05 Screw Pfaff creative 077.037.369</p>	 <p>Ref : 96.0401655BL Screw handwheel Pfaff 1200 077.401.655</p>	 <p>Ref : 93-838150-06 Screw thumb Pfaff most models 077.838.150</p>
 <p>Ref : 97 Screw presser bar Singer 27 class 077.000.097</p>	 <p>Ref : S12471 Screw handwheel Elna T33, T34 077.012.471</p>	 <p>Ref : S60569 Screw knife Babylock SL843, BL432 077.060.569</p>	 <p>Ref : SS-06004 Screw Babylock for 714-5201-01A 077.006.004</p>
 <p>Ref : X59530001 Screw presser foot Brother PE100 Babylock EM1 077.059.530</p>	 <p>Ref : X76215-001 Screw thread guide Brother 900D, 920D 077.076.215</p>	 <p>Ref : 91-034116-25 Screw handwheel Pfaff 1000-1200 077.034.116</p>	

SCHROEVEN VOOR GRIJPERS - VIS POUR BOUCLEURS - SCREWS FOR LOOPER AND CHAINING TONGUE - SCHRAUBE FÜR GREIFER

<p>Ref : 014400332 Brother PL1500, PL1600, PL2000 Upper looper 077.014.400</p>	 <p>Ref : 014400422 Brother 626D Upper looper 077.144.004</p>	 <p>Ref : 017501615 Brother PL105, 640D For looper 077.017.501</p>	 <p>Ref : 060670612 Brother 546D, 626D, 634D, 834DP Lower looper 087.060.670</p>
 <p>Ref : 062300412 Brother PL1500, PL1600, PL2000 Lower looper 078.062.300</p>	 <p>Ref : 062670612 Brother PL1050, 640D Lower looper 087.062.670</p>		 <p>Ref : 544211-052 Singer 14U all models Lower looper 077.544.211</p>
 <p>Ref : SI-30010 4TW-5102-01A, 408-5102-01A Chaining tongue 077.030.010</p>	<p>Ref : SS-06001 Babylock 605 Chaining tongue 077.060.010</p>	 <p>Ref : SS-08004 Babylock SE200 Looper holder 077.008.004</p>	 <p>Ref : X05281-001 Brother PL1050, 640D washer 077.005.281</p>
<p>Ref : X141542-001 Husqvarna F/ X75210-001 Chaining tongue 077.141.542</p>	<p>Ref : X75121-001 Brother Lower looper thread guide 077.075.121</p>	<p>Ref : XB1034-001 Brother 1034D Upper looper 078.001.034</p>	

SCREWS-WASHERS-PARTS



BABYLOCK

021400205	077.021.400	Nut 3P cover, Brother XL2010-3200, Babylock
052403006	077.052.403	Terminal box screw, Brother XL3010-3200, Babylock BL1556
060260316	077.060.260	Presser hook screw, Brother PC7000, Babylock
407-5201-02A	078.407.520	Needle guard nut, Babylock
714-4103-02A	077.714.410	Needle set screw, Babylock, Simplicity
J1653	077.001.653	Shuttle driver spring screw, Brother, Singer, Alphasew, Babylock
NI-30001	077.030.001	Chaining tongue nut, Babylock for 4TW-5102-01A, 408-5102-01A
S60850	077.060.850	Needle set screw, Babylock 432, SL804
SI-40015	077.040.015	Feed dog screw, Babylock BL4-736/D
SM-26003	077.026.003	Chaining tongue screw, Babylock for HA-G12-01A, SE-G12-01A
SS-08002	077.008.002	Feed dog screw, Babylock for 205-7101
SS-08005	077.008.005	Needle set screw, Babylock BL3-318
WS-03101	077.003.101	Chain tongue washer, Babylock for 4TW-5102-01A, 408-5102-01A
X58771051	077.058.771	Needle clamp screw, Brother PE100, Babylock EM
X59310001	077.059.310	Hook washer, Brother PE100, Babylock EM1
XA4052001	077.004.052	Needle clamp screw, Brother PE200, Babylock
XC2428021	077.002.428	Needle clamp screw, Brother NX200-600, Babylock
XC4266021	077.004.266	Needle clamp screw, Brother CS8100, 8200, Babylock
XZ0002051	077.002.051	Needle clamp screw, Brother UT2001, Babylock
XZ0388051	077.000.388	Needle clamp screw, Brother NV4000D, Babylock

BERNINA

0012975000	077.001.297	Needle set screw, Bernina 1005, 1006, 1008
014400422	077.144.004	Upper looper set screw, Brother 626, Viking 900, Bernina 800
016400632	077.400.632	Needle set screw, Brother 920, 934, Bernina
028030246	077.280.302	Needle bar thread guide washer, Brother 626D, Bernina, Viking

BROTHER

014300332	077.014.300	Needle set screw, Brother 526/D, 546
015300416	077.300.416	Needle set screw, Brother PL2000
015300516	077.300.516	Needle set screw, Brother PL1500
016300422	077.300.422	Needle set screw, Brother 546/D, 626
016400632	077.400.632	Needle set screw, Brother 920, 934, Bernina
021300106	077.021.300	Nut socket, Brother VX series
021400205	077.021.400	Nut 3P cover, Brother XL2010-3200, Babylock
021680206	077.021.680	Nut socket, Brother VX series
025040232	077.025.040	Upper knife washer, Brother 925D
025680133	077.025.680	Washer socket, Brother VX series
028040242	087.028.040	Lower knife spring washer, Brother PL1050, Viking
037200615	077.037.200	Spool stand shaft screw, Brother 925
052403006	077.052.403	Terminal box screw, Brother XL3010-3200, Babylock BL1556
061300416	077.613.004	Screw upper looper set, Brother 925
062300806	078.623.008	Needle clamp screw, mount Brother PL1500
062670312		Thread guide set screw, Brother 730DE
062670512		Screw set, Brother B523 overlooper
100032001	074.300.403	Needle plate screw, Brother Serger
105161002	087.105.161	Mounting washer, Brother 730DE, 760D
118521001	087.118.521	Needle clamp screw, Brother PQ1300/1500
132730151		Presser foot screw, Brother VX-1120
137805051	077.137.805	Hook washer, Brother PC5000/6000
137977000		Hook presser washer, Brother PC7000
138391001		Feed dog screw, Brother VX1010/1020
256	077.256.000	Stop motion knob screw, Singer 15CL, Brother
J1653	077.001.653	Shuttle driver spring screw, Broth.-Singer.-Alphas.-BBL for JO1310A
UB3848001		Hook screw, Brother PE100 for inner
X59310001	077.059.310	Hook washer, Brother PE100, Babylock EM1
X75051000	077.075.051	Washer tension, Brother 920D, 934D
X75721001	077.075.721	Screw set looper t/guide, Brother
X75770001	077.075.770	Screw, Brother PL1050, 640D
XA0644051	077.000.644	Needle clamp screw, Brother VX1120, 1125
XA1387051	077.001.387	Thread guide screw, Brother PC2800/3000
XA4813051	077.004.813	Presser foot screw, Brother PE-300S
XA5133251	077.005.133	Needle set screw, Brother PE300S/400D
XB0304001	077.000.304	Needle presser nut, Brother 929D
XC2428021	077.002.428	Needle clamp screw, Brother NX200-600, Babylock
XZ0002051	077.002.051	Needle clamp screw, Brother UT2001, Babylock
XZ0388051	077.000.388	Needle clamp screw, Brother NV4000D, Babylock

ELNA

374101	077.374.101	Needle set screw, Singer 14U64, Elna L-4
396011-57	078.396.011	Screw for 396015-44 Antenna Elna

JUKI

A1409-303-000	077.140.930	A1409-303-000 Needle set screw, Juki MO613
A1416-334-000	077.141.633	A1416-334-000 Needle set screw, Juki MO634D

SINGER

106254	077.106.254	Needle set screw, Singer 14U595, Pfaff 4860, 4870—right
141820-803	077.141.820	Bracket spring screw, Singer 600
141896-451	077.141.896	Feed dog screw, Singer 750, 900
141920-819	077.141.920	Feed dog screw, Singer 240, 250
145	077.000.145	Screw shuttle race, Singer 15CL
155464	077.155.464	Position bracket washer, Singer
1560	077.001.560	Tension thumb nut, Singer 27, 127, 66
163950 S	078.163.950	Stitch length regulator screw and washer, Singer 500
200145	077.200.145	Hook loop screw, Singer 221
256	077.256.000	Stop motion knob screw, Singer 15CL, Brother
284040	077.284.040	Screw, Singer
313190-451	077.313.190	Position bracket washer, Singer 4552, 4622
354921-451	077.354.921	Slide plate spring screw, Singer 6230
		Feed & rotating hook drive shaft bearing block screw—4552, 4622, 7028, 9005, 9008, 9010, 9410
355235-451	077.355.235	Feed dog screw, Singer 5605, 5705
355248-451	077.355.248	Needle clamp screw, Singer 5605, 5610
374101	077.374.101	Needle set screw, Singer 14U64, Elna L-4
374334	077.374.334	Needle set screw, Singer 14U65, 14U85
374364	077.374.364	Needle set screw, Singer 14U34 for left and right
374365	077.374.365	Needle set screw, Singer 14U285
374573	077.374.573	Screw set, Singer 644, 654
374617	077.374.617	Needle set screw, Singer 14U544, 554
376805	077.376.805	Needle set screw, Singer 14U32, 52
445808	077.445.808	Bobbin case retaining plate stud washer, Singer 1802
446138	077.446.138	Screw washer, Singer 5417/3
		Heat shield mounting screw washer
		Spool pin screw washer
		Rotating hook bobbin case position plate screw washer (right)
446417	077.446.417	Retaining plate clip, Singer 1802
514674-451	077.514.674	Retaining ring nut, Singer 4522, 4622
		Feed & rotating hook drive shaft bearing block mounting screw nut
53640	077.053.640	Bobbin winder stop screw nut, Singer
544065	077.544.065	Needle set screw, Singer 14U13—left
544413	077.544.413	Screw upper looper, Singer all 14U
549324	077.549.324	Needle set screw, Singer 14U13—left
725	077.000.725	Slide plate screw, Singer 15CL
J1653	077.001.653	Shuttle driver spring screw, Brother, Singer., Alphas., BBL for JO1310A
MO4L08A06	077.040.080	Extension table screw, Singer 14T948DS
421871	077.421.871	Retaining ring, Singer 4218
387126	077.387.126	Screw, Singer Quantum embr. frame
141942-825	077.141.942	Needle set screw, Singer 2712-2732
374353	077.374.353	Needle clamp thread screw, Singer
72274	077.072.274	Needle clamp positioned screw, Singer
374352	077.374.352	Needle clamp bracket screw, Singer

VIKING (HUSQVARNA)

014400422	077.144.004	Upper looper set screw, Brother 626, Viking 900, Bernina 800
028030246	077.280.302	Needle bar thread guide washer, Brother 626D, Bernina, Viking
028040242	087.028.040	Lower knife spring washer, Brother PL1050, Viking
060300616	077.060.300	Feed dog screw, Brother 900D, 920D, Babylock, Viking
060670612	087.060.670	Lower looper screw thread guide, Brother, Viking
142957001	077.142.957	Bed cushion screw, Viking
4119668-02	077.411.966	Bobbin case stop screw, Viking S205-S500= HH JA
4122252-01	078.412.225	Screw, Viking #1
4113543-01	077.411.354	Washer, Viking

PPAFF

106254	077.106.254	Needle set screw, Singer 14U595, Pfaff 4860, 4870
91-001382-15	077.001.382	Bobbin case tens.screw, Pfaff for 91-105544-91 black thumb adjust.
93-034116-25	077.034.116	Handwheel screw, Pfaff 1000, 1200—metal
93-034129-15	077.034.129	Needle set screw, Pfaff most models
93-70-614	077.106.254	Needle clamp screw, Pfaff 776, 784
93-414030-4	077.414.030	Handwheel screw, Pfaff 4240/50/60

TOYOTA

11935	077.011.935	Needle set screw, White 7234, Toyota 6300, 6600
-------	--------------------	---